

Quick-Connect Guide

NS-FP9500

 
Home Cinema Speaker Package

home theater

YAMAHA®


Yamaha created this package to greatly enhance your audio and home theater enjoyment. This Quick-Connect Guide will help you get started. Follow the steps to assemble and connect the speakers first. Refer to your Owner's Manuals as well as those that came with your other components for complete instructions and precautions. Be sure to turn off all power while making connections. You will need the following which are not included in the package: Phillips screwdriver, wire cutter/stripper, brackets, toggle bolts, molly anchor screws or sheet metal screws.

1 In the Box

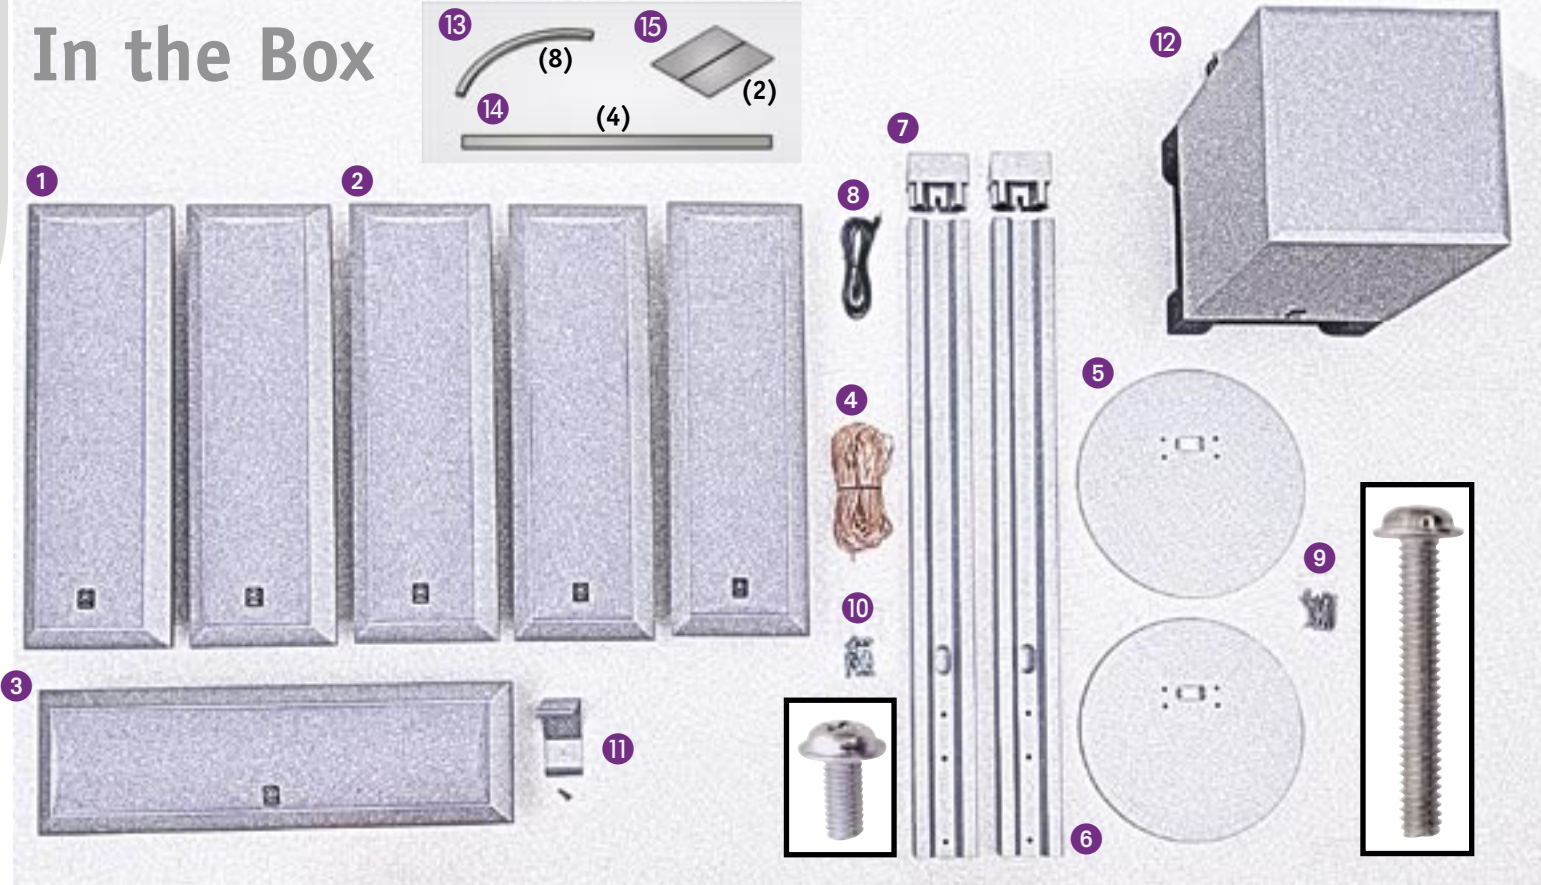


Inspect Contents After unpacking, inspect the contents to confirm you have the above items: ① two main speakers, ② three rear speakers, ③ one center speaker, ④ speaker wire, ⑤ two bases, ⑥ two speaker stands, ⑦ two finishing brackets, ⑧ RCA cable, one bag each of ⑨ long screws (8) and ⑩ short screws (4), ⑪ center speaker bracket and screw, ⑫ subwoofer, ⑬ non-skid pads for base, ⑭ non-skid pads for stands, and ⑮ cable protection seal for base.

 2 Room Layout

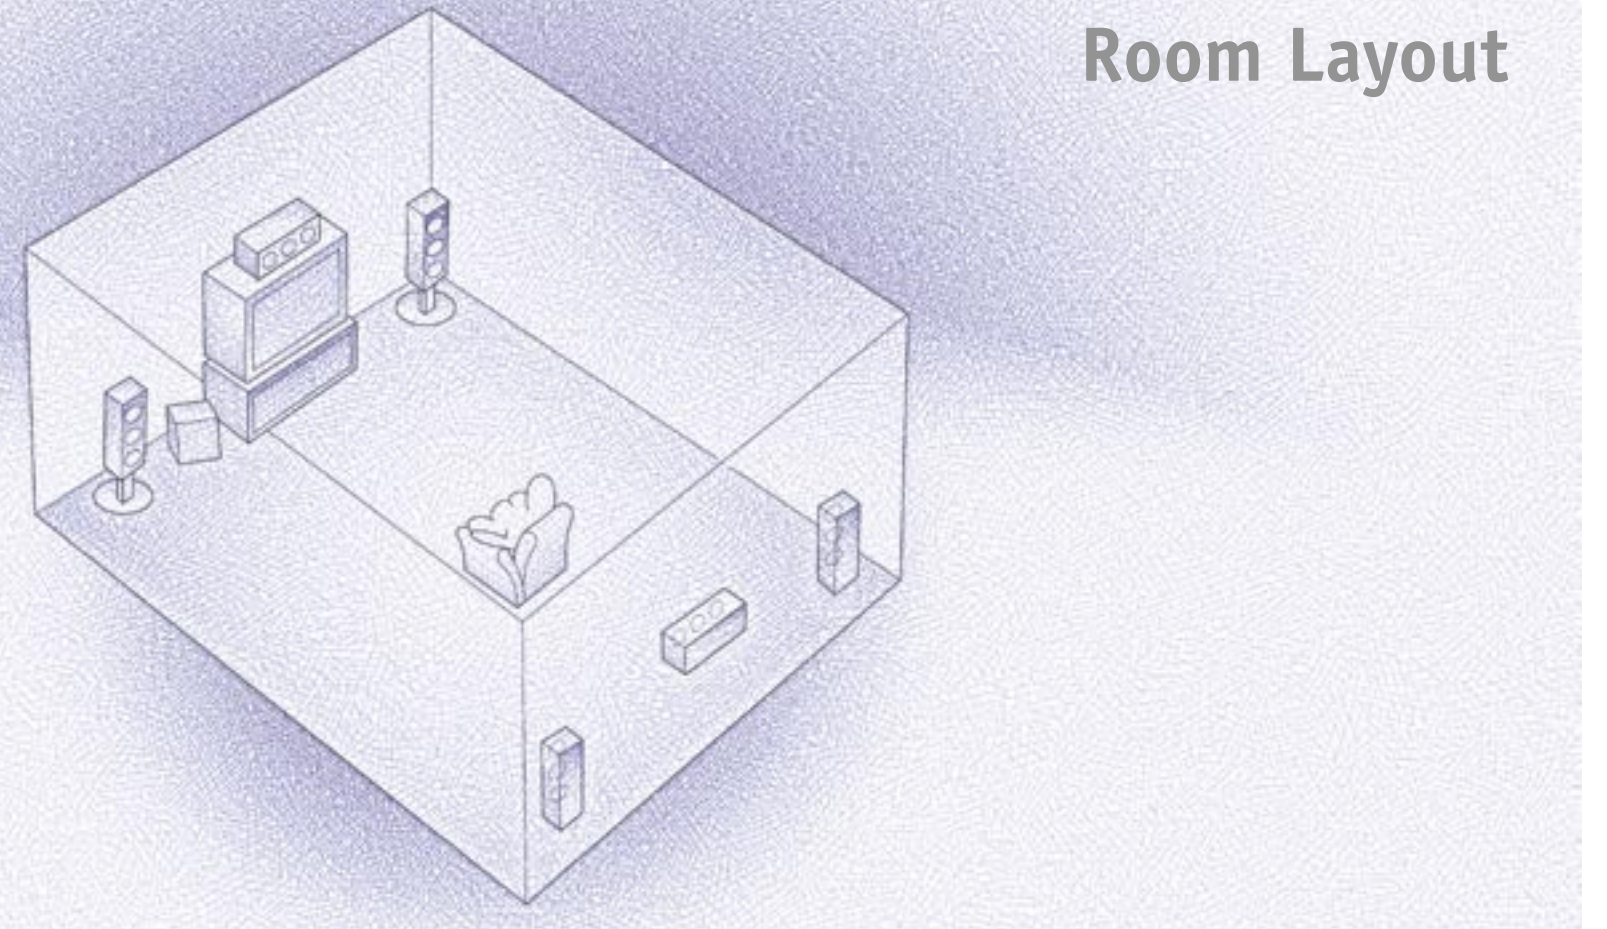


Speaker Placement After assembly of the speakers place them so they appear in the approximate positions as shown in the diagram above.

 3 Main Speaker Assembly

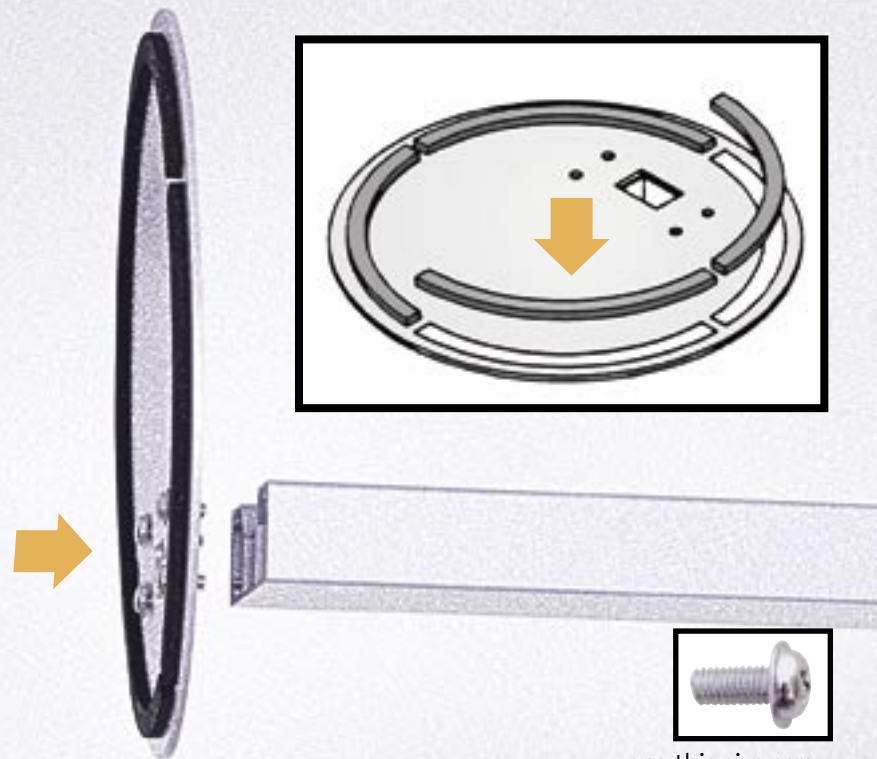


Attach Bases to Stands Apply the non-skid pads ⑬ as shown in the inset. Identify both speaker stands ⑥ and both bases ⑤ and attach using short screws ⑩ as shown.

 4 Thread Speaker Wires

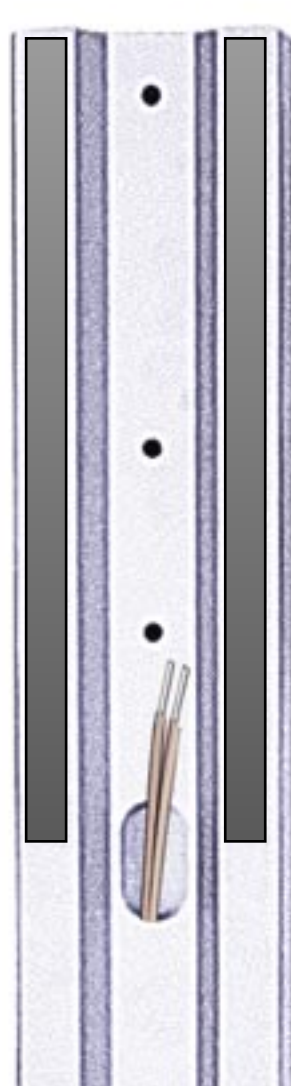


Thread Speaker Wires Cut speaker wire ④ to appropriate lengths for all speaker connections and set aside. Place each long stand upright on its base. Thread main speaker wire through oval opening on stand and pull through opening on underside of base. Pull wire all the way through leaving extra length near oval opening as shown. Apply non-skid pads ⑭ on stands.

 5 Attach Main Speakers

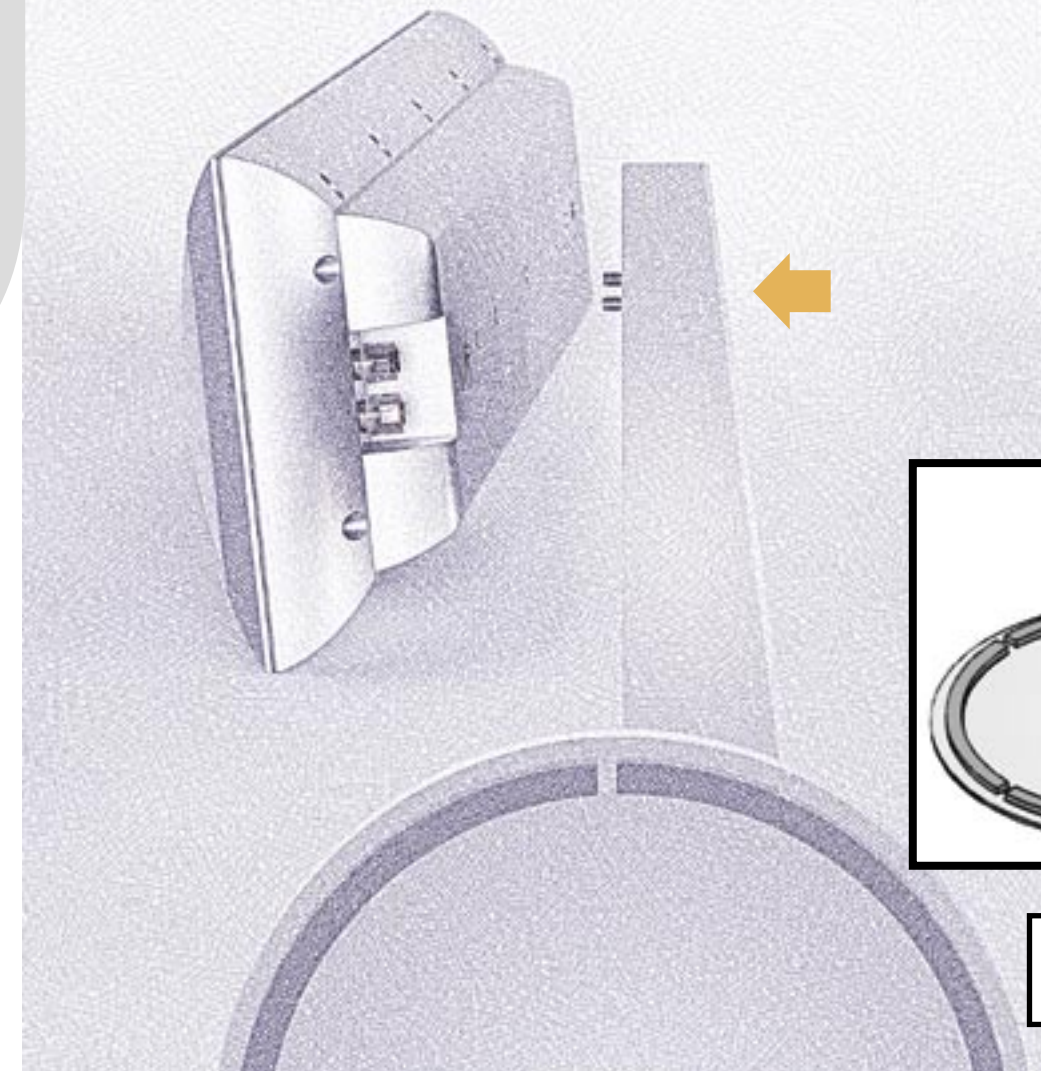

Attach Main Speakers Lay stands down. Line up holes so that oval opening is near speaker wire connections on speaker. Attach main speakers using long screws as shown. Attach cable protection seal ⑮ to base as shown in inset.

 
6 Connect Main Speaker Wire

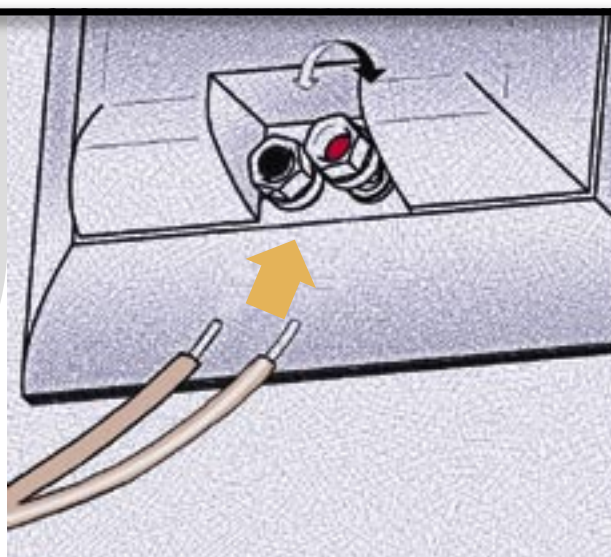

Connect Main Speaker Wire For illustration purposes, stand, which is now attached to speaker, is not shown in diagram above. Locate screw-type input terminals at the rear of each of the speakers. Connect the speaker wire as shown. The positive (+) side of the wire with the white stripe attaches to the red terminal. The negative (-) side attaches to the black terminal. (Please see your NS-FP9500 Owner's Manual for more detailed instructions on speaker wire connections.) Place assembled main speakers in desired location to the left and right of the viewing/audio source. (See Step 2, Room Layout.)

NOTE Banana plug connectors (not included) can be used to connect speaker wire to speaker terminals. Please see your Owner's Manual for directions.

 7 Rear Speakers

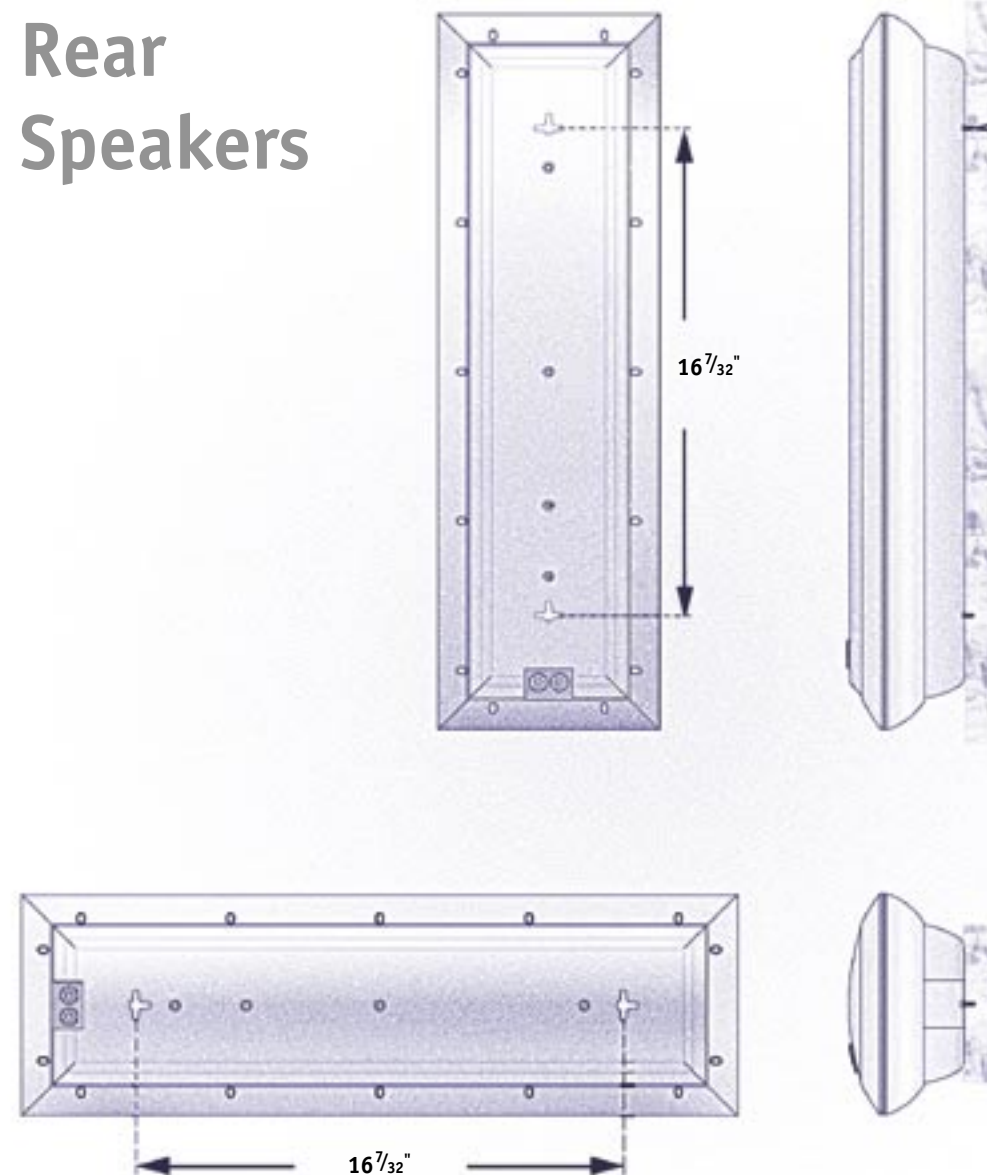


For mounting screws, use minimum 1 3/4" tapping screw (not included). Leave 1/4" space between screw head and wall.

Mount Rear Speakers and Rear Center Speaker (Optional) Fasten mounting screws into a firm wall or wall support as shown. Hang the keyholes on the back of the each of the speakers ② on the protruding screws. Attach speaker wire as shown in Step 6.


WARNING If you are unsure of how to securely and safely fasten speakers to a wall, please contact a reliable source about the best type of hardware for your particular wall's construction. Secure installation is the purchaser's responsibility. See Owner's Manual for additional instructions and precautions.

 8 Attach Finishing Brackets

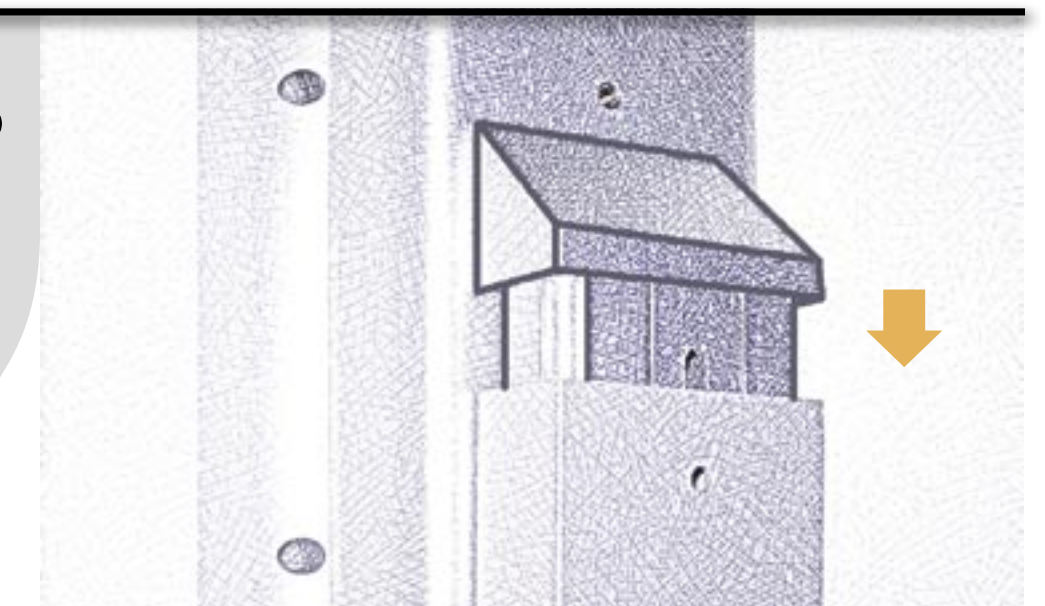


Attach Finishing Brackets ⑦ on top of two speaker stands.

 9 Front Center Speaker Assembly

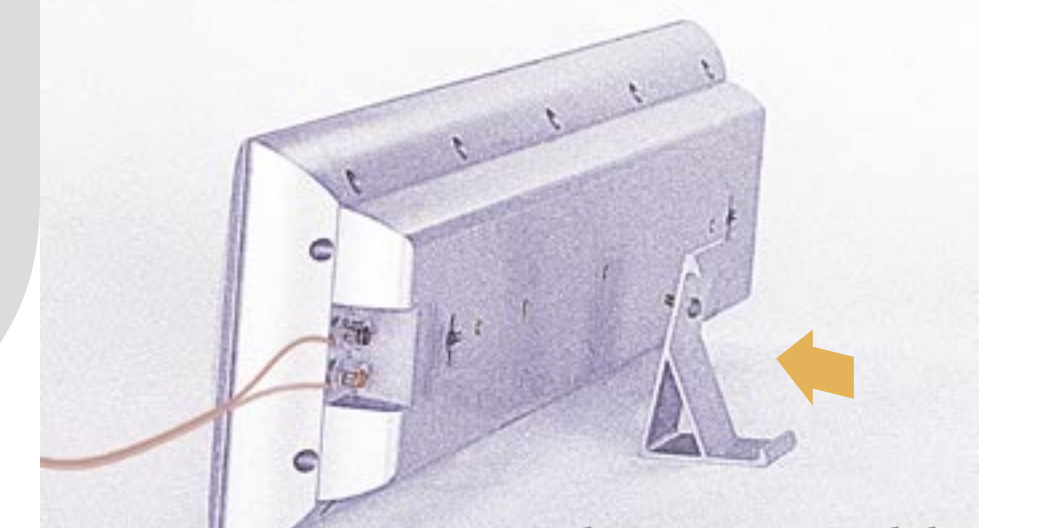

Attach Bracket and Speaker Wire Attach bracket ⑪ to center speaker ③ using supplied screw as shown. Attach speaker wire as shown in Step 6.

 
10 Receiver Connections

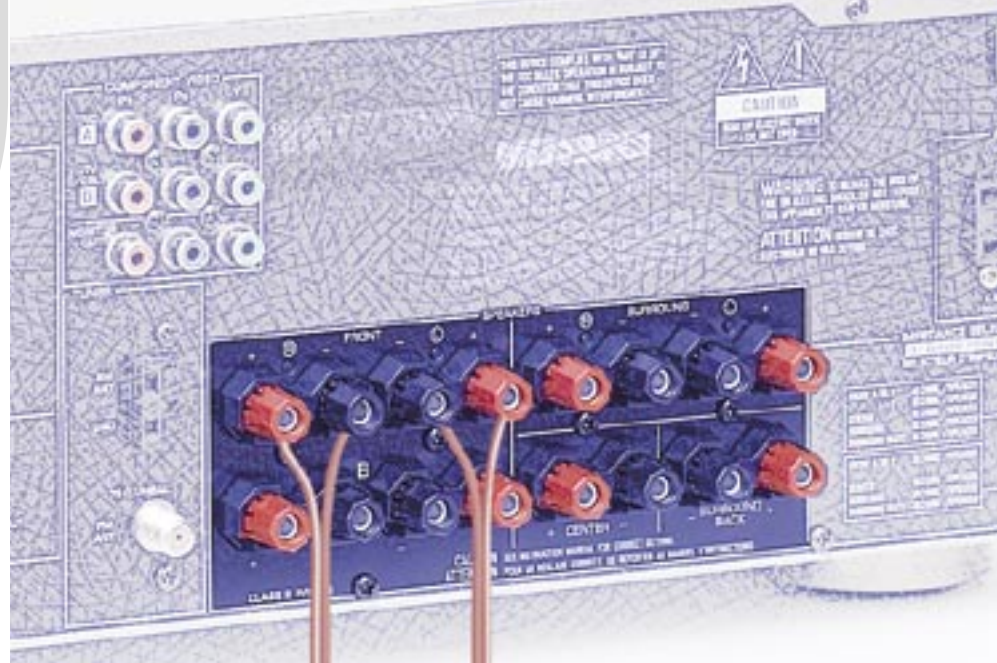

Connect Main Speakers Unplug receiver before proceeding. Identify "Front" or "Main" speaker terminals on receiver. Connect left main speaker wire to left main terminals and right main speaker wires to right main terminals as shown. Positive (+) side of the wire with white stripe attaches to red terminal. Negative (-) side attaches to black terminal.


NOTE Receiver shown is for illustration purposes, yours may differ.
CAUTION Receiver must not be plugged in while connecting speakers.

 11

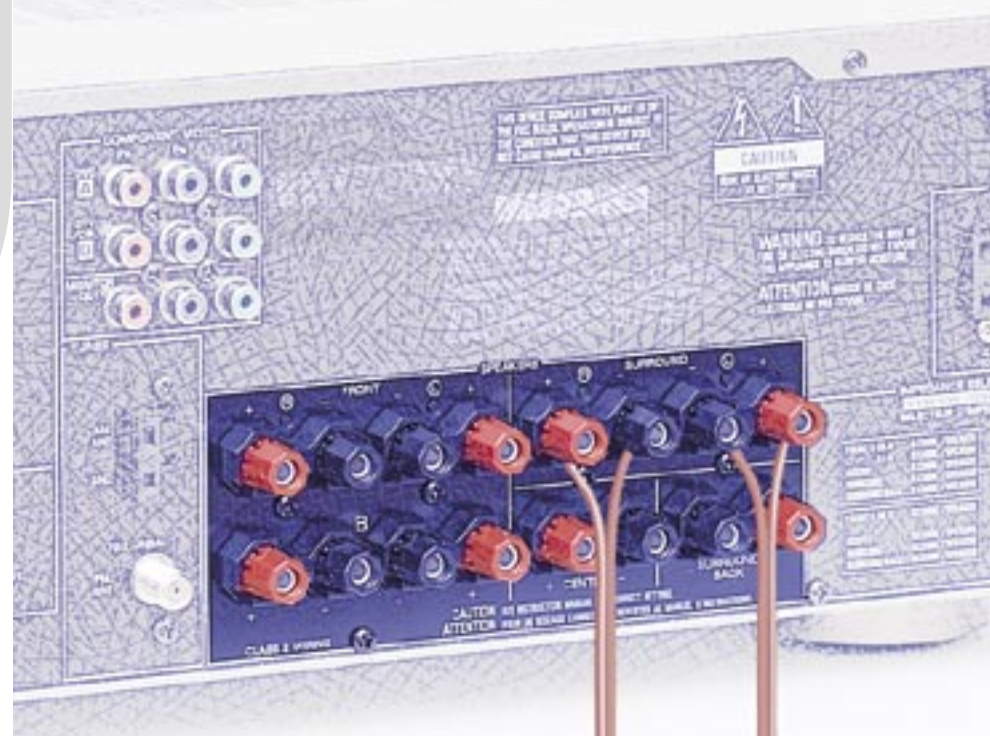


Connect Rear Speakers Identify "Rear" or "Surround" speaker terminals on receiver. Connect left rear speaker wire to left rear terminals and right rear speaker wire to rear right terminals as shown. Positive (+) side of the wire with white stripe attaches to red terminal. Negative (-) side attaches to black terminal.

 12

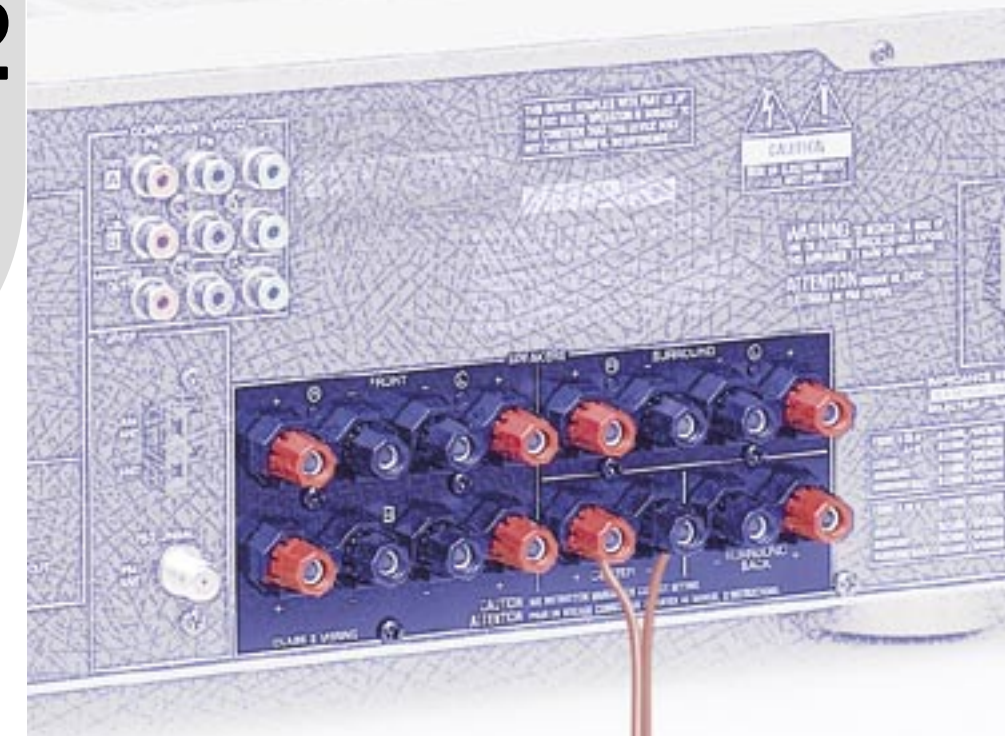


Connect Center Speaker Identify Center speaker terminals on receiver. Connect center speaker wire to center terminals as shown. Positive (+) side of the wire with white stripe attaches to red terminal. Negative (-) side attaches to black terminal.

 13

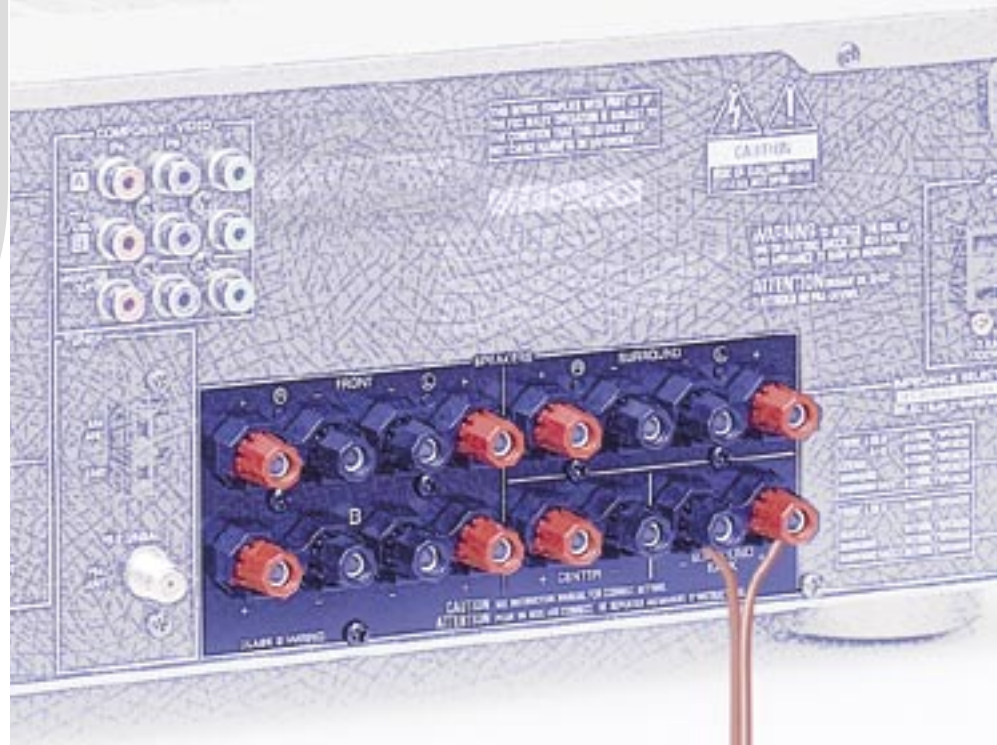

Connect Rear Center Speaker Identify Rear Center speaker terminals on receiver. Connect rear center speaker wire to rear center terminals as shown. Positive (+) side of the wire with white stripe attaches to red terminal. Negative (-) side attaches to black terminal.

 14 Subwoofer Connection

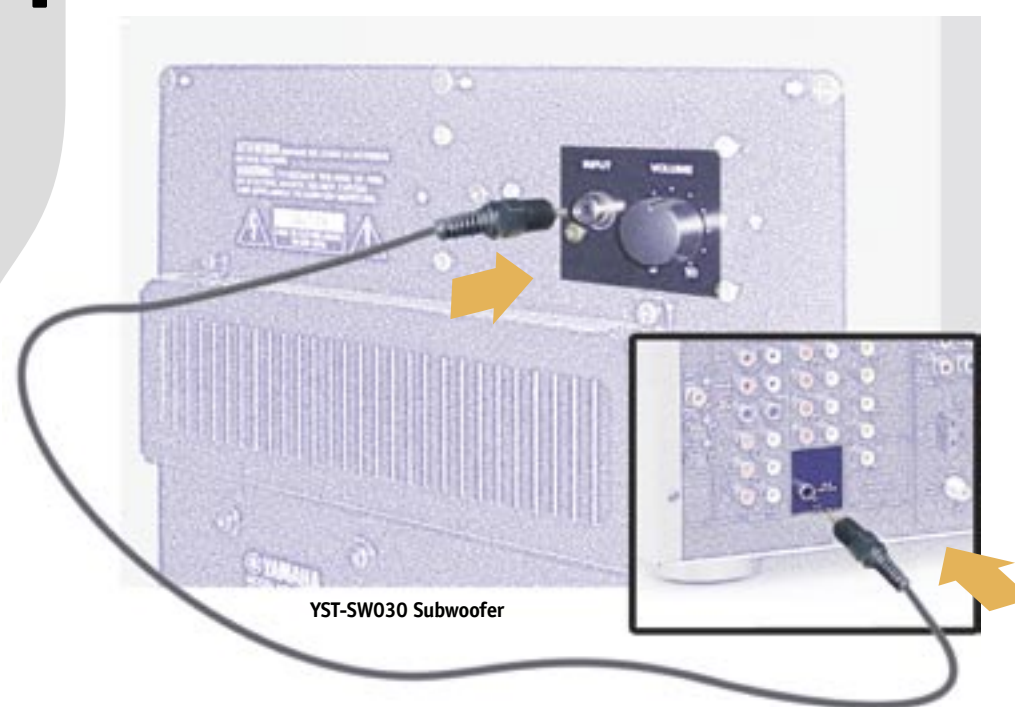

Connect RCA Cable Connect RCA cable 8 to subwoofer. Set subwoofer VOLUME control to half-way mark and POWER to OFF. Connect RCA cable to receiver from subwoofer.

CAUTION Subwoofer must not be plugged in while connecting it.

15



Plug In Plug in the subwoofer and receiver each into an electrical outlet. Power on the receiver first then the subwoofer. Adjust volume on the receiver to taste. Please see your receiver's owner's manual for recommended guidelines and settings.

16



Enjoy the Home Theater Experience We hope you enjoy the sound of your Yamaha Home Theater speaker system.



YAMAHA ELECTRONICS CORPORATION, USA
 6660 Orangethorpe Avenue
 Buena Park, CA 90620
<http://www.yamaha.com>
 Phone: 1-800-292-2982

©2004 Yamaha Electronics Corporation
 Printed in USA