

**YAMAHA ELECTONE®**

**ME-50**

**ME-30**

**WELCOME TO THE MUSICAL WORLD OF YAMAHA**

**WILLKOMMEN IN DER MUSIKALISCHEN WELT VON YAMAHA**

**BIENVENUE DANS LE MONDE MUSICAL DE YAMAHA**

**BIENVENIDO AL MUNDO MUSICAL DE YAMAHA**

# ME-50

AUTO BASS CHORD (10-34-58-82)

MELODY ON CHORD (12-36-60-84)

ARPEGGIO CHORD (6-30-54-78)

Voice Sections (5-29-53-77)

TREMOLLO/SYMPHONIC (7-31-55-79)



AUTO RHYTHM (8-32-56-80)

REGISTRATION MEMORY (13-37-61-85)

FOOT SW

PLAYER VIBRATO (20-44-68-92)

TEMPO Lamp (8-32-56-80)

C.S.

SUSTAIN (21-45-69-93)

# ME-30

MELODY ON CHORD (12-36-60-84)

AUTO BASS CHORD  
(10-34-58-82)

PLAYER VIBRATO  
(20-44-68-92)

Voice Sections (5-29-53-77)



AUTO RHYTHM (8-32-56-80)

ARPEGGIO CHORD (6-30-54-78)

C.S.P. PL

SUSTAIN (21-45-69-93)

TEMPO Lamp (8-32-56-80)

TREMOLLO (7-31-55-79)

M

## MULTI-MENU



ITCH (9-33-57-81)

C.S.P. PLAY (15-39-63-87)

MASTER VOLUME (4-28-52-76)

POWER (4-28-52-76)



AY (15-39-63-87)

MASTER VOLUME (4-28-52-76)

POWER (4-28-52-76)

### REGISTRATION MENU (14-38-62-86)

REGISTRATION MENU 1	1	2	3	4	5	6	7	8
---------------------	---	---	---	---	---	---	---	---

REGISTRATION MENU 2	9	10	11	12	13	14	15	16
---------------------	---	----	----	----	----	----	----	----

### C.S.P. RECORD (15-39-63-87)

C.S.P. RECORD		←	→	REGIST/					EDIT/CLEAR
---------------	--	---	---	---------	--	--	--	--	------------

### C.S.P. PLAY MODE (17-41-65-89) TRANSPOSITION (21-45-69-93)

C.S.P. PLAY MODE	REPEAT	INTRO. COUNT	CHORD CANCEL	+	TRANS-POSITION	NORMAL	↑	↓
------------------	--------	--------------	--------------	---	----------------	--------	---	---

### VOICE MENU (19-43-67-91)

VOICE MENU 1	PIPE ORGAN	COSMIC BRASS 1	COSMIC BRASS 2	PIANO	ELECTRIC PIANO	HARPSI-CHORD	ORIGINAL VOICE	MENU ON
--------------	------------	----------------	----------------	-------	----------------	--------------	----------------	---------

VOICE MENU 2	ACOUSTIC GUITAR	ELECTRIC GUITAR	JAZZ GUITAR	STEEL GUITAR	DISTORTION GUITAR	CLAVINET	TIMPANI	WHISTLE
--------------	-----------------	-----------------	-------------	--------------	-------------------	----------	---------	---------

VOICE MENU 3	PAN FLUTE	CLARINET	FLÜGEL HORN	SOPRANO SAX	HARMONICA	COSMIC 1	COSMIC 2	CONTRA BASS
--------------	-----------	----------	-------------	-------------	-----------	----------	----------	-------------

### PLAYER VIBRATO (20-44-68-92)

PLAYER VIBRATO	← U. SOLO →	U. ORCHESTRAL	MIN	MAX
	DELAY	DEPTH	DEPTH	0 1 2 3 4

### SUSTAIN (21-45-69-93)


SUSTAIN	UPPER ORCHES.	LOWER ORCHES.	PEDALS	SHORT	LONG
				0 1 2 3 4	

### CASSETTE & PACK (22-46-70-94)

CASSETTE & PACK	CASSETTE	REGISTRATION PACK
	TO CASSETTE FROM CASSETTE *	TO PACK * FROM PACK ERROR CONFIRM


- The numbers in brackets indicate the pages in this manual where you will find an explanation of these parts and features.
- Die in Klammern angegebenen Zahlen beziehen sich auf die Seiten in dieser Bedienungsanleitung, auf denen Sie die Erklärung der betreffenden Teile und Funktionen finden.
- On trouvera de plus amples renseignements sur ces commandes et caractéristiques en consultant les pages indiquées entre parenthèses.
- Los números entre corchetes indican las páginas de este manual en las que encontrará las explicaciones sobre estas partes y características.



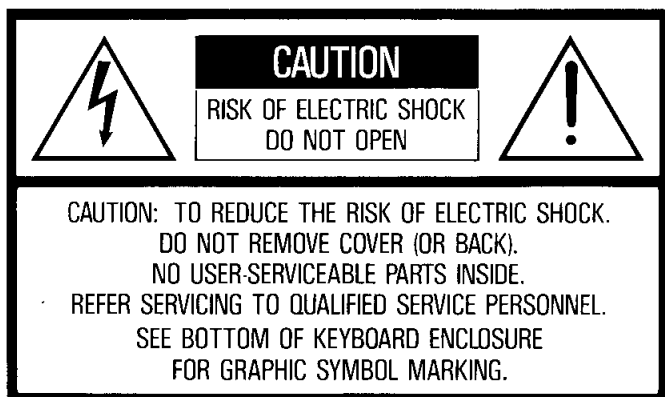

### Explanation of Graphical Symbols

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

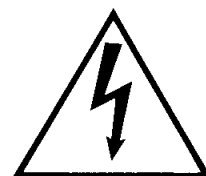

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



---

## IMPORTANT SAFETY INSTRUCTIONS

---

**WARNING**—When using electric products, basic precautions should always be followed, including the following:

1. Read all the instructions before using the product.
2. To reduce the risk of injury, close supervision is necessary when a product is used near children.
3. Do not use this product near water—for example, near a bathtub, washbowl, kitchen sink, in a wet basement, or near a swimming pool, or the like.
4. This product should be used only with a cart or stand that is recommended by the manufacturer.
5. This product, either alone or in combination with an amplifier and headphones or speakers, may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should consult an audiologist.
6. The product should be located so that its location or position does not interfere with its proper ventilation.
7. The product should be located away from heat sources such as radiators, heat registers, or other products that produce heat.
8. The product should be connected to a power supply only of the type described in the operating instructions or as marked on the product.

**9.** This product may be equipped with a polarized line plug (one blade wider than the other). This is a safety feature. If you are unable to insert the plug into the outlet, contact an electrician to replace your obsolete outlet. Do not defeat the safety purpose of the plug.

**10.** The power-supply cord of the product should be unplugged from the outlet when left unused for a long period of time.

**11.** Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

**12.** The product should be serviced by qualified service personnel when:

- A. The power-supply cord or the plug has been damaged; or
- B. Objects have fallen, or liquid has been spilled into the product; or
- C. The product has been exposed to rain; or
- D. The product does not appear to operate normally or exhibits a marked change in performance; or
- E. The product has been dropped, or the enclosure damaged.

**13.** Do not attempt to service the product beyond that described in the user-maintenance instructions. All other servicing should be referred to qualified service personnel.

## SAVE THESE INSTRUCTIONS

## Introduction

Thank you for purchasing an ME-Series Yamaha Electone. The ME-Series is a totally new type of Electone, utilizing the very latest in electronic technology, made possible by Yamaha's experience as a musical instrument manufacturer for nearly a century. Some of the many exciting features included are the Chord Sequence Programmer, which lets you preprogram the accompaniment (CHORDS/BASS) before you actually begin to play the melody; the Registration Menu which offers you a choice of 16 complete registrations at a touch of a single button; and the Voice Menu which provides an additional 22 voices that may be transferred to any voice section you choose. Thanks to these outstanding features, your playing potential becomes almost limitless. In addition, the basic performance features such as sound authenticity, auto rhythm and auto accompaniment functions have also been greatly improved,

## Einleitung

Herzlichen Glückwunsch zum Kauf einer Yamaha Electone der ME-Serie.

Die ME-Serie ist ein völlig neuer Typ von Electone mit der neuesten elektronischen Technik, ermöglicht durch die fast ein Jahrhundert lange Erfahrung von Yamaha als Hersteller von Musikinstrumenten. Einige der aufregenden eingebauten Merkmale sind Akkord-Sequenz-Programmer, der es erlaubt, die Begleitung (Akkorde/Bässe) vor dem Spielen der Melodie zu programmieren; das Registratur-Menü, das eine Auswahl von 16 vollständigen Registern auf einfachen Knopfdruck bietet; sowie das Stimmen-Menü, das zusätzliche 22 Stimmen bietet, die zu jeder beliebigen Stimmensektion übertragen werden können.

Dank dieser hervorragenden Merkmale ist Ihr Spielpotential praktisch unbegrenzt. Außerdem wurden auch die grundlegen-

## Introduction

Nous vous remercions sincèrement de votre achat de cet Electone Yamaha de Série ME.

L'Electone de Série ME est un instrument d'un genre tout nouveau qui fait appel aux progrès les plus récents de l'électronique et dont la création a été rendue possible grâce à l'expérience acquise pendant près de 100 ans par Yamaha dans la fabrication d'instruments de musique. Vous trouverez sur cet instrument toute une gamme de caractéristiques exclusives, telles que le Programmeur de séquence d'accords qui vous permet de programmer à l'avance des accompagnements (CHORDS/BASS) avant de jouer la mélodie, le Menu de Registres qui met à votre disposition un choix de 16 registres, utilisables par une simple poussée sur une touche, ou encore le Menu de Voix qui fournit 22 voix supplémentaires, transférables vers n'importe quelle section voix.

## Introducción

Gracias por la adquisición de este Electone serie ME Yamaha. La serie ME es un tipo completamente nuevo de Electones, que utilizan los últimos adelantos en tecnología electrónica, y que han sido posibles gracias a la experiencia de Yamaha como fabricante de instrumentos musicales adquirida durante aproximadamente un siglo. Algunas de las excitantes funciones incluidas son el Programador de secuencias de acordes que le permitirá programar el acompañamiento de acordes y bajos (CHORD/BASS) antes de comenzar a tocar una melodía; el Menú de registros que le ofrece 16 registros completos pulsando simplemente un botón; y el Menú de voces que proporciona 22 voces adicionales que podrá transferir a la sección de voces que desee.

Gracias a estas notables funciones, su potencial como organista

providing you with an instrument which offers you whole new worlds of musical expression.

This manual has been designed to help you get acquainted with your ME-Series Electone and to bring its fascinating possibilities easily within your reach. We recommend that you actually sit at your Electone while carefully reviewing these materials.

Thanks again for choosing Yamaha. Your fun has just begun! Before you begin to explore the vast array of resources your Electone makes available to you, please take a moment to read the "IMPORTANT SAFETY INSTRUCTIONS" and the "Installation and Maintenance" sections.

den Leistungsmerkmale wie Klangechtheit, Auto-Rhythmus und Auto-Begleitung wesentlich verbessert, wodurch Sie ein Instrument erhalten, das eine ganz neue Welt der musikalischen Ausdrucksfähigkeit eröffnet.

Diese Bedienungsanleitung wurde geschrieben, um Ihnen zu helfen, sich mit der richtigen Handhabung und Bedienung Ihrer neuen Electone der ME-Serie vertraut zu machen und deren faszinierende Möglichkeiten voll ausnutzen zu lernen. Um maximale Spielfreude zu erhalten, raten wir an, die Schritte dieser Bedienungsanleitung mit der Electone vor Ihnen gleich auszuprobieren.

Bevor Sie beginnen, nehmen Sie sich aber die Zeit, den Abschnitt "Aufstellung und Pflege" durchzulesen, der wichtige Informationen über Ihre Electone enthält. Nochmals herzlichen Glückwunsch zur Wahl von Yamaha. Ihr Spaß fängt jetzt erst an!

Toutes ces fonctions exceptionnelles représentent un potentiel de reproduction sonore quasi illimité. De plus, les fonctions d'exécution de base, telles que l'authenticité sonore, le rythme automatique et les fonctions d'accompagnement automatique ont fait l'objet de perfectionnements au point que cet instrument vous ouvre des horizons tout neufs d'expression musicale.

Le présent manuel a été conçu pour vous aider à vous familiariser avec votre Electone de Série ME et à tirer parti de ses remarquables possibilités. Nous vous conseillons de vous asseoir face à votre instrument et de lire attentivement ces explications.

Encore tous nos remerciements et bon amusement!

Avant de commencer à jouer, veuillez consacrer quelques instants à la lecture des chapitres "Installation et Entretien" car ils renferment certaines précautions importantes, ayant trait à votre Electone.

será prácticamente ilimitado. Además, se han mejorado notablemente las características de las funciones de ejecución básicas tales como autenticidad de sonido, ritmo y acompañamiento automáticos, para ofrecerle un instrumento que le introducirá en un nuevo mundo de expresión musical.

Este manual ha sido diseñado para ayudarle a familiarizarse con su Electone serie ME y poner al alcance de sus manos sus fascinantes posibilidades. Le recomendamos que se siente ante su Electone revisando cuidadosamente este manual.

Gracias de nuevo por haber elegido Yamaha, y ¡diviértase a placer con su Electone!

Antes de comenzar, lea las secciones de Instalación y Mantenimiento que contienen información importante sobre su Electone.

# Contents

	Page		
<b>I. The Basic Features of Your Electone</b>		3. 22 Additional Voices Can be Transferred To The Control Panel.....	19
1. First, Let's Produce Some Sounds.....	4	4. You Can Also Memorize Vibrato and Sustain Effects.....	20
2. Now, Let's Create Some Registrations.....	5	5. Transposing.....	21
3. Using Effects for an Even Richer Sound.....	7	6. Transferring Memorized Information to a Cassette or Pack.....	22
4. Adding Rhythm.....	8	<b>III. Useful Information</b>	
5. Having Fun With Automatic Accompaniment.....	10	● Accessory Jacks and Optional Items.....	24
6. Harmonizing the Melody.....	12	● Electromagnetic Interference.....	24
7. Memorizing Your Favorite Registrations.....	13	● Installation and Maintenance.....	25
<b>II. What Multi Menu Can Do For You</b>		● FCC Information (USA).....	25
1. You Can Recall 16 Different Registrations.....	14	● Troubleshooting.....	26
2. Programming the Accompaniment.....	15	● Specifications.....	27
		● MIDI Implementation Chart.....	100

# Inhaltsverzeichnis

	Seite		
<b>I. Die grundlegenden Merkmale Ihrer Electone</b>		3. 22 verschiedene Stimmen können zum Steuerpult übertragen werden.....	43
1. Lassen Sie uns einige Töne erzeugen.....	28	4. Speichern von Vibrato- und Sustain-Effekten.....	44
2. Lassen Sie uns einige Registraturen erzeugen.....	29	5. Transponieren.....	45
3. Effekte für einen noch reicheren Klang.....	31	6. Übertragen von gespeicherter Information auf Cassette oder Pack.....	46
4. Hinzufügen von Rhythmus.....	32	<b>III. Nützliche Informationen</b>	
5. Spaß mit der automatischen Begleitung.....	34	● Anschlußbuchsen für Sonderzubehör.....	48
6. Harmonisieren mit der Melodie.....	36	● Elektromagnetische Interferenzen.....	48
7. Speichern der besten Registraturen.....	37	● Aufstellung und Pflege.....	49
<b>II. Was Multi-Menu für Sie tun kann</b>		● Störungsbeseitigung.....	50
1. Sie können 16 verschiedene Registraturen abrufen.....	38	● Technische Daten.....	51
2. Programmieren der Begleitung.....	39	● MIDI-Anwendungstabelle.....	100

# Table des matières

	Page		
<b>I. Fonctions principales de l'Electone</b>		4. Mémorisation des effets de vibrato et de soutien.....	68
1. Premiers pas dans la production sonore.....	52	5. Transposition.....	69
2. Création de certains registres.....	53	6. Transfert d'informations mémorisées sur une cassette ou un accu mémoire.....	70
3. Utilisation de certains effets enrichissants.....	55	<b>III. Informations utiles</b>	
4. Intervention du rythme.....	56	● Prises accessoires et équipements en option.....	72
5. Les prodiges de l'accompagnement automatique.....	58	● Interférence électromagnétique.....	72
6. Harmonisation de la mélodie.....	60	● Installation et entretien.....	73
7. Sauvegarde des registres favoris.....	61	● Dépistage des pannes.....	74
<b>II. Ce que peut faire le Multi Menu</b>		● Fiche technique.....	75
1. Rappel de 16 registres différents.....	62	● Tableau d'exploitation MIDI.....	100
2. Programmation de l'accompagnement.....	63		
3. Transfert de 22 voix supplémentaires vers le panneau de commande.....	67		

# Índice

	Página		
<b>I. Características básicas de su Electone</b>		3. Al panel de control pueden transferirse 22 voces adicionales.....	91
1. Antes de nada, produzcamos algunos sonidos.....	76	4. Usted también puede memorizar efectos de vibrato y sostenido.....	92
2. Ahora, creemos algunos registros.....	77	5. Transposición.....	93
3. Utilización de efectos para lograr un sonido más rico todavía.....	79	6. Transferencia de información memorizada a un casete o cartucho.....	94
4. Adición de ritmos.....	80	<b>III. Información útil</b>	
5. Utilización del acompañamiento automático.....	82	● Tomas para accesorios e ítems opcionales.....	96
6. Armonización de melodías.....	84	● Interferencia electromagnética.....	96
7. Memorización de sus registros favoritos.....	85	● Instalación y mantenimiento.....	97
<b>II. Lo que el menú múltiple puede hacer por usted</b>		● Solución de problemas.....	98
1. Usted puede utilizar 16 registros diferentes.....	86	● Especificaciones.....	99
2. Programación de acompañamientos.....	87	● Tabla de implementación de MIDI.....	100

## 1. First, Let's Produce Some Sounds

### POWER/MASTER VOLUME/EXPRESSION PEDAL

(Photograph of ME-50)


**1** First of all, make sure that the plug is firmly inserted in the wall power outlet.

**2** Turn the Electone "On" by pressing the POWER SWITCH.




**3** Set the MASTER VOLUME control. This control lets you adjust the overall volume of your instrument. For now, place it in about a 2:00 position.

MASTER VOLUME

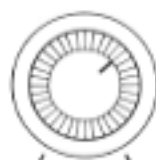

**4** Place your right foot on the EXPRESSION PEDAL, which controls the overall volume while playing, for increased musical expression.

Push forward with your toes to make it louder, and back with your heel to make it softer.

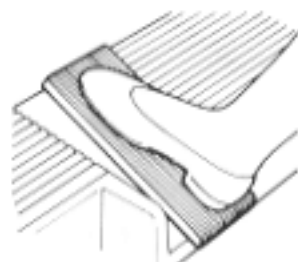

**5** Select a registration.



Now, let's operate the REGISTRATION MENU which provides a choice of 16 registrations, each available at the touch of a single button. Rotate the MULTI MENU thumbwheel until you see one of the panels illustrated above, then press one button (numbered 1, 2, 3...16) on the selected panel. (See page 14 for additional details.)



**6** Play some notes.

Now press some notes on the upper or lower keyboard. You will hear some of the sounds available on your new Electone.






# 2. Now, Let's Create Some Registrations

## Voice Sections

Both the ME-50 and the ME-30 have two voice sections for the upper keyboard, one voice section for the lower keyboard, and one for the pedal keyboard.

### 1 Choose one sound from each section.

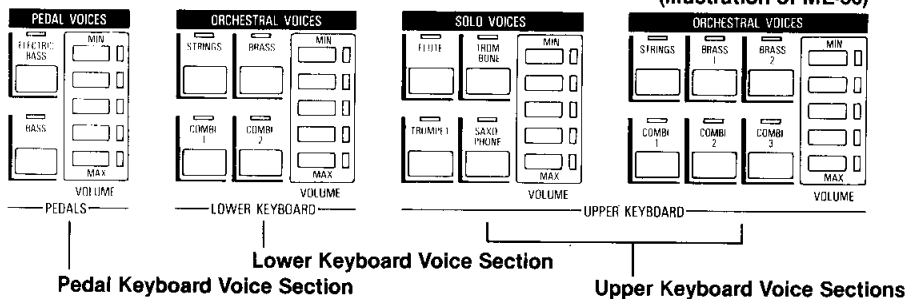

**ORCHESTRAL VOICES:** This voice section consists of two groups of sounds. The Orchestra group recreates the major instrumental sections of an orchestra, while the Combination group provides a variety of organ sounds.

**SOLO VOICES:** This section contains solo instruments such as flute, saxophone and trombone. These sounds are monophonic, which means that only one note may be played at any given time.

**PEDAL VOICES:** This section consists of the sounds of the electric bass and traditional organ bass. In order to hear your pedal sounds, please be sure that "Single Finger" and "Fingered Chord" (Auto Bass Chord Section) is "Off".

### 2 Set the volume.


Please set the volume to the desired level for each of these sections. Your Electone lets you select one of five volume levels—the top one (MIN) being OFF and the bottom one (MAX) being full volume.

In case you do not need the sound from a particular Voice Section, set the volume level of that section to its top position (MIN).



### 3 Play the keyboards.

The voices you have selected will be produced as you play each keyboard. Let's change the voices to other settings and compare the sounds.

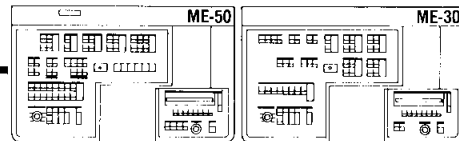

#### [Contents of Combination Presets]

(ME-50 Upper Keyboard)

**Combi. 1:** Flute 8'

**Combi. 2:** Full organ

**Combi. 3:** Jazz organ

(ME-30 Upper Keyboard)

**Combi. 1:** Full organ

**Combi. 2:** Jazz organ

(Lower Keyboard of ME-50/ME-30)

**Combi. 1:** Principal (Basic organ)

**Combi. 2:** Flute 8'

#### [Number of notes able to be produced on each keyboard]

**Upper/Lower keyboard:** Up to 7 notes can be played simultaneously on each keyboard.

**Pedal keyboard and Solo Voices:** Normally, only one note can be played at a time. When more than two notes are played at the same time, the note farthest to the right has priority.

#### [Memory when power is off]

When the power is turned off, the control panel settings (Registration) will be stored in memory. The memorized registration will automatically be recalled when the power is again turned on.

#### [Additional Information]


- Sounds from Voice Menus 1, 2 and 3 can be transferred from the Multi Menu to any of the grey buttons in the voice sections. (See page 19 for details.)
- In addition to the "ORCHESTRAL VOICES" section, the lower keyboard also has an ARPEGGIO CHORD section for producing rhythmic accompaniment. (See page 6 for details.)
- When you wish to produce sound by playing the pedal keyboard, turn off the SINGLE FINGER and FINGERED CHORD functions of AUTO BASS CHORD.

# ARPEGGIO CHORD

This feature provides harmonic background accompaniment that is synchronized with the rhythm based on the notes you play on the lower keyboard.

## 1 Using ARPEGGIO CHORD.


Buttons 1 and 2 are primarily strumming chord patterns.

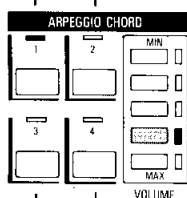

Buttons 3 and 4 are primarily Arpeggio patterns.


Choose one of these pattern selectors and set the desired volume. If ARPEGGIO CHORD is not desired, set its volume level to the top position (MIN).

## 2 Select an auto rhythm and start it.

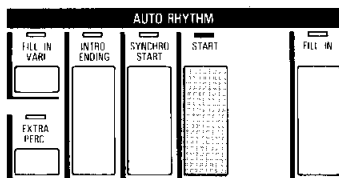


Choose a rhythm pattern and set the desired volume and tempo. Now turn the auto rhythm on. (See page 8 for details.)

## 3 Press some keys on the lower keyboard.

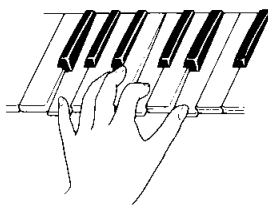

You will now hear an "ARPEGGIO CHORD" pattern based on the notes you have pressed, played at the same tempo (speed) as the rhythm unit. Try some of the other patterns, as well as different rhythms, to hear some of the numerous possibilities.

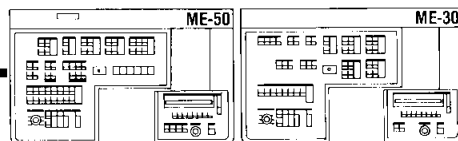

### [ARPEGGIO CHORD patterns]

The Arpeggio Chord patterns and the instruments used in each pattern will change according to the rhythm selected to ensure that an appropriate accompaniment is obtained for each rhythm.

### [Use this feature with Auto Bass Chord, too!]

Arpeggio Chord can also be used with the Auto Bass Chord system. The Automatic Bass pattern will change as you move from one Arpeggio Chord pattern to another. When the MEMORY button is pressed, the Arpeggio Chord accompaniment will continue even if you remove your fingers from the lower keyboard. (See page 10 for details.)


### [Additional Information]

- Since this feature is synchronized with the rhythm, please be sure to start the auto rhythm in order to hear the Arpeggio Chords.
- When the FILL IN or ENDING buttons are pressed, the Arpeggio Chord pattern is also automatically changed. (See page 9 for details.)

# 3. Using Effects for an Even Richer Sound


## TREMOLO/SYMPHONIC (ME-50) • TREMOLO (ME-30)

These effects add another dimension to the Upper and Lower ORCHESTRAL VOICES sections. The ME-50 also offers a SYMPHONIC effect in addition to the TREMOLO effect.

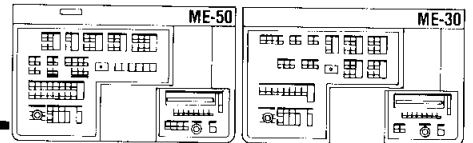


**1** Choose one sound from the ORCHESTRAL VOICES Section of the upper keyboard, and one sound from the corresponding section for the lower keyboard. Then set the volume levels.


**2** Press the UPPER ORCHES. and LOWER ORCHES. buttons.

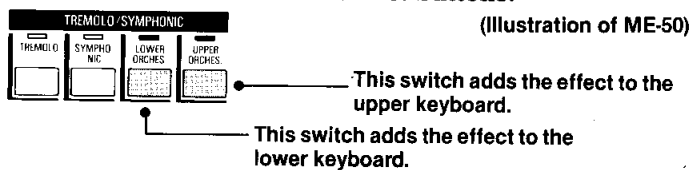


**3** Add the TREMOLO effect. Now play some keys on both the upper and lower keyboards.

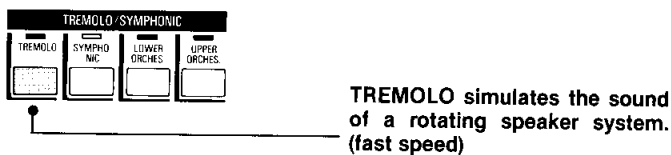

**4** If you own an ME-50, add the SYMPHONIC effect. Now, play some keys on both the upper and lower keyboards.

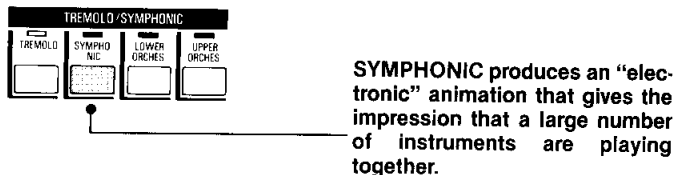

### [CHORUS effect]

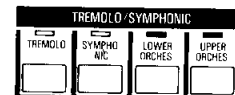


When the Tremolo and Symphonic effects are OFF, a CHORUS effect will be produced. (slow tremolo)

### [Additional Information]

- There are other effects designed to enhance your playing. See page 20-21 for information regarding PLAYER VIBRATO and SUSTAIN.

## GLIDE (ME-50 only)

This effect allows you to temporarily lower the pitch of a SOLO VOICES sound by approximately one-half step.

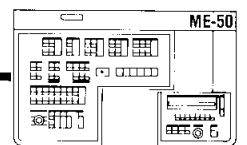


**1** Turn both FOOT SWITCH related selectors "OFF". (See page 9.)



**2** Select a SOLO VOICES sound, then move the foot switch to the left while holding some notes on the upper keyboard.

While the foot switch is being held to the left, the pitch of the SOLO VOICE selected (on the upper keyboard) is lowered by approximately a halfstep. When the foot switch is released, the pitch slowly returns to normal.

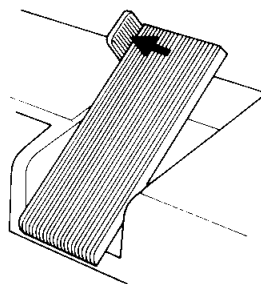

### [Additional Information]


- This effect is particularly useful in the simulation of acoustic instruments, that are customarily played using a glide effect... such as trombone, guitar, and violin.
- While the Glide effect is on, the Vibrato effect applied to SOLO VOICES becomes inactive.

# 4. Adding Rhythm


## AUTO RHYTHM

This effect automatically produces various rhythm patterns consisting of authentic percussion sounds. It also has functions, such as FILL IN and INTRO./ENDING, for varying the rhythm.

**1** Select one of the rhythm patterns and set the desired volume level.

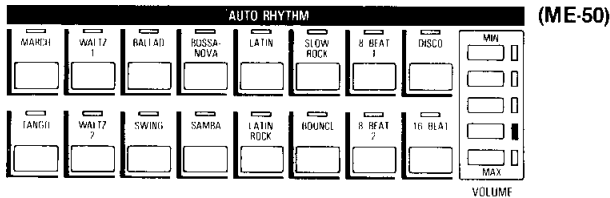


The ME-50 has 16 different rhythm patterns. Choose one pattern from among the above pattern selectors.

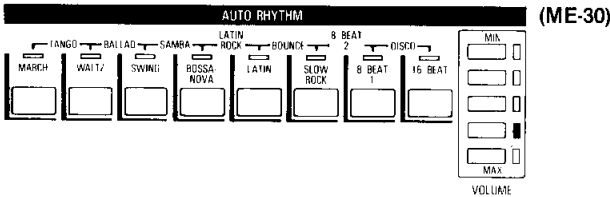

The ME-30 has 15 distinct rhythm patterns. To choose one of the eight patterns displayed on the bottom row (MARCH, WALTZ, SWING, etc.), press the appropriate button. To choose one of the seven patterns displayed on the top row (TANGO, BALLAD, SAMBA, etc.), simultaneously press the two adjacent buttons below the desired pattern name (both of their indicator lamps will be illuminated.) (For example, to choose TANGO, simultaneously press the MARCH and WALTZ buttons.)


**2** Adjust the tempo (Speed) of the rhythm.

This knob is used to control the speed of the rhythm. The tempo will increase if you turn the knob clockwise and will decrease when you turn it counter-clockwise.

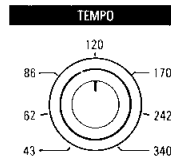


**3** Turn the rhythm on.

If you turn this button ON, the rhythm will wait and start with you when you play a note on the lower (or pedal) keyboard.

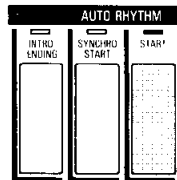


When this button is turned ON, the rhythm will start immediately.

Once the rhythm has been started, pressing one of these buttons again will stop the rhythm.

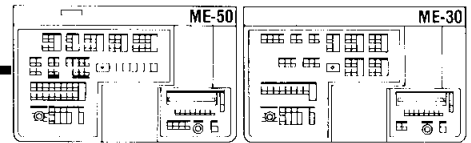

### [TEMPO lamp]

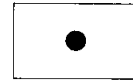

TEMPO

Once the rhythm has been activated, this lamp will flash at the first beat (downbeat) of each measure.

In addition, when SYNCHRO START is in use, this lamp will act as a silent visual metronome, indicating the exact tempo (in quarter notes) until the rhythm is started.

### [Numerals on TEMPO knob]

Please refer to these values as a "yardstick" for setting the speed of the rhythm.

### [Additional Information]


- Since Synchro Start enables the rhythm and accompaniment to be started at the same time, it is very convenient when playing accompaniment using Auto Bass Chord or Arpeggio Chord. (See page 10.)

## FILL IN

**1** Start the rhythm.

**2** Press the FILL IN switch when you want to add this feature.

FILL IN provides a variation to the basic rhythm pattern. At the time you press the switch, the Fill In pattern will play until the end of that measure, and the rhythm will automatically return to the original pattern at the start of the next measure.

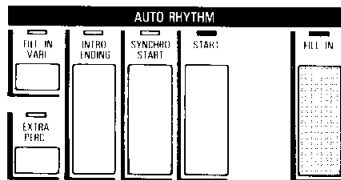

### [FILL IN VARIATION]



This feature offers you an alternative Fill In pattern.

### [Additional Information]

- Should you desire a longer Fill In pattern, hold the FILL IN button.
- If you press the FILL IN button before starting the rhythm, the Fill In pattern will act as an intro.



## INTRO./ENDING

**1** Press the INTRO./ENDING switch and then press the start switch.

You will now hear a one measure rhythm introduction.

**2** When you are almost finished with a song, press the INTRO./ENDING switch.

At the moment this switch is pressed, an ending pattern (two measures maximum) is played. As soon as the ending pattern is completed, the rhythm will stop automatically.

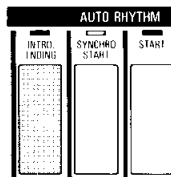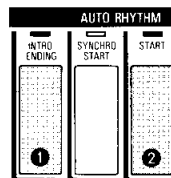

- INTRO./ENDING can be used even when Synchro Start has been used to start the rhythm.

## EXTRA PERCUSSION

This feature will add additional percussion sounds to the normal rhythm patterns.




- Some of the instruments added in Extra Percussion are hand clap, tambourine and cow bell, and vary from rhythm to rhythm.

## FOOT SWITCH (ME-50 only)

**1** Press one of the FOOT SWITCH selectors and start the rhythm.


This allows you to stop (and restart) the rhythm with the foot switch.

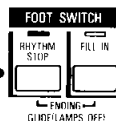

This will allow you to add a Fill In pattern with the foot switch.


**2** Move the Foot Switch to the left.

At the time the Foot Switch is moved, the function selected in (1) will be immediately performed.

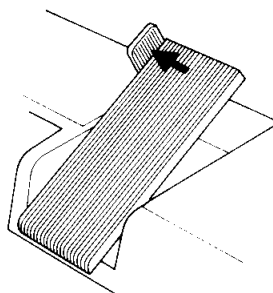

### [ENDING control]

If both the RHYTHM STOP and RHYTHM FILL IN buttons are on, and the foot switch is moved to the left, you will obtain an ending pattern and then the rhythm will stop.

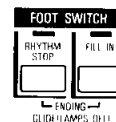

When both FOOT SWITCH selectors are off, the Glide effect can be obtained. (See page 7.)


### [Additional Information]

- When RHYTHM STOP is used to stop the rhythm, the foot switch can also be used to restart it again. The lamp above the STOP button will flash until the rhythm is reactivated.

# 5. Having Fun With Automatic Accompaniment

## AUTO BASS CHORD


This function automatically produces chord and bass accompaniment. There are three different ways that you can use this feature, and we're sure that you'll find one just right for you.

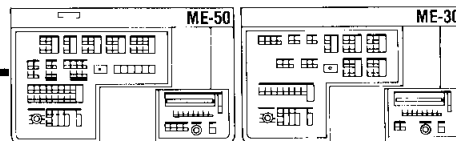

### SINGLE FINGER

This feature allows you to obtain many different chords (and bass) by using just one finger.


**1 Press the button labeled SINGLE FINGER.**

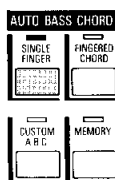


(Illustration of ME-50)

**2 Select an Arpeggio Chord pattern and your desired volume level. (See page 6.)**

Arpeggio Chord provides the rhythm accompaniment for A.B.C. You can also add other lower keyboard voices to your accompaniment.

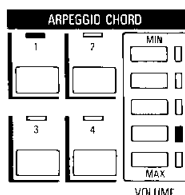


**3 Select a pedal sound and your desired volume level. (See page 5.)**

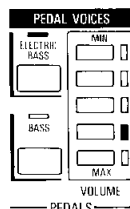


**4 Select a rhythm. (See page 8.)**

Once you've chosen a rhythm pattern, adjust the tempo to a speed comfortable for you. Then set your desired volume level and turn on SYNCHRO START.

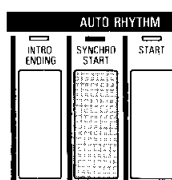


**5 Press a key on the lower keyboard.**

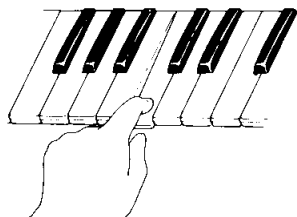

You will now hear a major chord and bass accompaniment in synchronization with the rhythm.

The note you have played is called the "root". A chord derives its name from its root such as C major, F major, etc.

[Relationship between the lower keyboard notes and corresponding major chords]

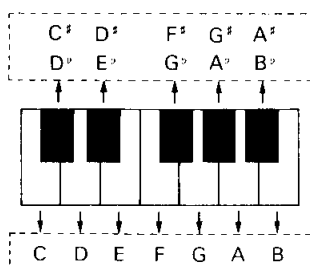

**[Let's try playing other chords!]**


**Minor chords:** Simultaneously press the root (name) as well as any black key to the left of it. (Example: Am)



**Seventh chords:** Simultaneously press the root (name) as well as any white key to the left of it. (Example: G7)



**Minor seventh chords:** Simultaneously press the root (name) as well as any black key and any white key to the left of it. (Example: Gm7)

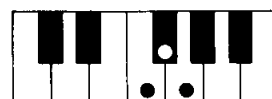


**[Additional Information]**

- When you change Arpeggio Chord patterns, the bass pattern will automatically be changed.
- With Single Finger, the chord produced will sound in the same octave regardless of where it is played on the lower keyboard.
- When you want to change chords, please lift your finger completely from the lower keyboard for a moment before pressing the next key.

## MEMORY

This feature allows the chord and bass accompaniment to continue even after you have lifted your fingers from the lower keyboard.

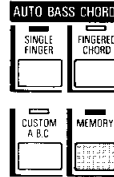


- Memory is linked with the auto rhythm and therefore will operate only if the rhythm is on (whether or not Auto Bass Chord is in use).

## FINGERED CHORD

This feature permits you to play a variety of chords and will automatically provide the proper bass note.

### 1 Press the button labeled FINGERED CHORD.

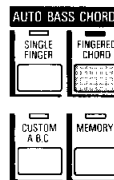

### 2 Select an Arpeggio Chord pattern and your desired volume level. (See page 6.)

You can also add other lower keyboard voices to your accompaniment.


### 3 Select a pedal sound and your desired volume level. (See page 5.)

### 4 Select a rhythm. (See page 8.)


Once you've chosen a rhythm pattern, adjust the tempo to a comfortable speed and set your desired volume. If you use SYNCHRO START, the automatic accompaniment and rhythm will start when you play a chord on the lower keyboard.

### 5 Play a chord on the lower keyboard.

You will now hear a chord and bass accompaniment in synchronization with the rhythm. The chord you play forms the basis for the automatic accompaniment. You can also add Memory, if you like.

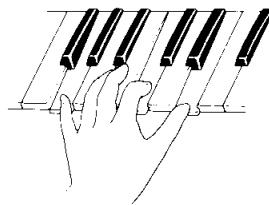

#### [Examples of Fingered Chords]

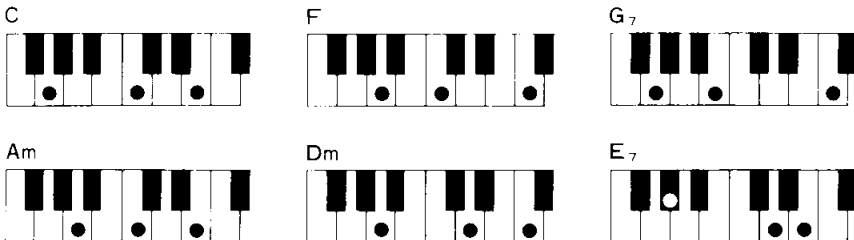


With Fingered Chord, a variety of other chords becomes available to you, above and beyond the four basic types obtainable with Single Finger.

Your Electone will automatically play the proper bass accompaniment to whatever chord you play.

#### [CUSTOM A.B.C.]

Custom A.B.C. allows you to play a chord and pedal, and it will automatically create accompaniment patterns for you!

- 1) Press the button labeled CUSTOM A.B.C.

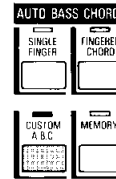

- 2) Choose instruments for the lower keyboard (including Arpeggio Chord, if you like) and the pedal keyboard. Set all volumes to the level of your choice.
- 3) Select a rhythm.
- 4) Play a chord on the lower keyboard and press one note on the pedal keyboard.

You will now hear a chord and bass accompaniment in synchronization with the rhythm. Since the note pressed on the pedal keyboard can be any note (i.e., it does not have to be the "root" of the chord played on the lower keyboard), more sophisticated automatic accompaniments become available to you.

#### [Additional Information]

 
 
- When Auto Bass Chord is used without the auto rhythm, your Electone will still provide the chords and bass, but the background will be stationary (not "animated").  
Note: Arpeggio Chords will not work without rhythm. (See page 6.)
- Some of the chords available in the Fingered Chord mode are the following: major, minor, 7th, minor 7th, major 7th, dim, aug, aug7, sus4, 7sus4, 6th, min7-5, major-5, 7-5, min6.
- When using Custom A.B.C., the MEMORY button will be used to memorize only the bass accompaniment.
- In the Custom A.B.C. mode, when playing pedals that are not necessarily a part of the chord, select from the upper row of Arpeggio Chord buttons (strumming patterns).

# 6. Harmonizing the Melody

## MELODY ON CHORD

With this function, single note melodies are transformed into beautiful harmonies automatically, enhancing your playing even further.

### 1 Press one of the MELODY ON CHORD buttons.


This will automatically add two notes to your melody. —  — This will automatically add three notes to your melody. 

### 2 Select an instrument to play the melody. (See page 5.)

Select the sound you want to perform your melody from among the voices available on the upper keyboard, and set the volume level.

### 3 Select your Harmony voices.

(The illustration shows the ME-50)

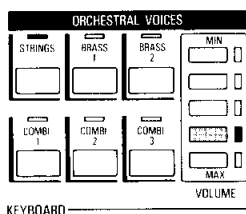


Select the sound with which you want to perform your melody from among the voices available on the upper keyboard, and set the volume level.

### 4 Select a voice for the lower keyboard. (See pages 5 and 6.)


Once you've chosen one, remember to set your volume level.

### 5 Play a chord on the lower keyboard and the melody on the upper keyboard.

Harmonies will be automatically added to the melody, and your playing will sound more professional than ever!

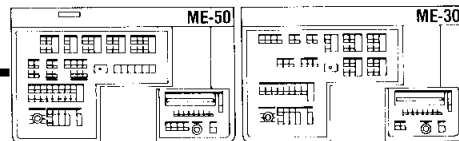

[When both Buttons 1 and 2 are turned on]

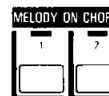

If MELODY ON CHORD 1 and 2 buttons are used simultaneously, you will obtain a three note harmony that is somewhat reminiscent of "open harmony".

**[Use this feature with Auto Bass Chord too!]**

MELODY ON CHORD 1 and 2 can also be used with A.B.C. For example, if you use Single Finger, the chords automatically produced (by one finger) will be added as harmonies to the melody. If Memory and Auto Rhythm are in use, the harmonies will continue even after you have lifted your fingers from the lower keyboard.

**[Additional Information]**


- The automatically added harmony sound is derived from chords played on the lower keyboard. Therefore, no harmony will result when you play only the upper keyboard.
- When a melody is played on the lower range of the upper keyboard, harmony sounds will sometimes not be produced.



# 7. Memorizing Your Favorite Registrations [ME-50 only]


## REGISTRATION MEMORY

This feature lets you store some of your favorite sounds in memory and have them conveniently accessible at the touch of a button.

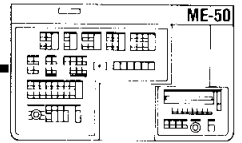


### How to Memorize a registration

**1** By using the control panel, set up your desired registration.

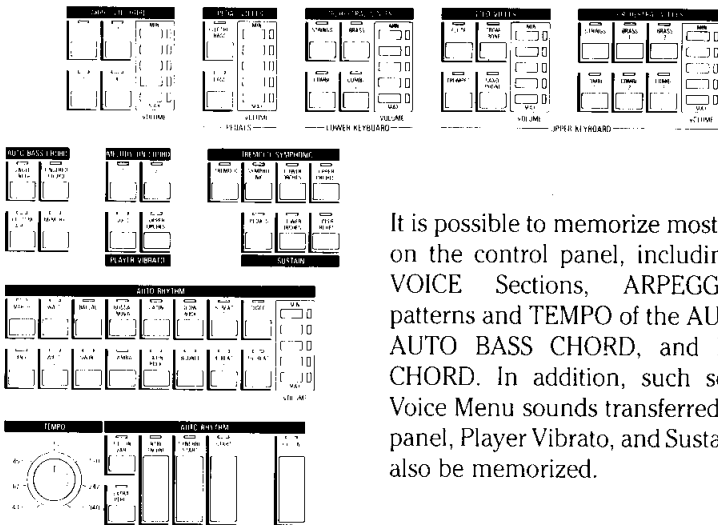

It is possible to memorize most of the settings on the control panel, including the various VOICE Sections, ARPEGGIO CHORD patterns and TEMPO of the AUTO RHYTHM, AUTO BASS CHORD, and MELODY ON CHORD. In addition, such settings as the Voice Menu sounds transferred to the control panel, Player Vibrato, and Sustain settings can also be memorized.


**2** While pressing the red M. (Memory) button, press the numbered button (1, 2, 3, 4) where you wish to store the sound.

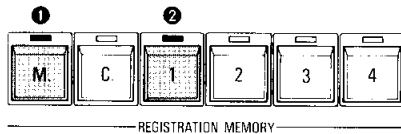

The lamp above the numbered button you pressed will flash briefly, indicating that this registration has been memorized here. Store your other favorite registrations in the same way, utilizing the remaining numbered buttons.

### How to Recall a Registration From Memory

**1** Press one of the numbered buttons.

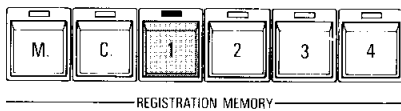

As soon as a numbered button is pressed, the registration that was placed in memory will instantly be set up on the control panel.

**2** Additional registrations can be recalled by pressing the appropriate numbered buttons.



Whenever you press a different numbered button, the control panel setting will instantly change. You can easily see what settings have been memorized.

[CANCEL]



Pressing this control will return you to the registration that existed just prior to the use of the Registration Memory buttons.

#### [Altering a Registration]

Any registration may be altered to any extent by simply changing the desired controls. Even if you have changed the control panel settings, the memorized registration will not be affected and will remain as it was programmed. If you wish this "altered" registration to be stored in memory, simply hold M. (Memory) button, and press the numbered button (1,2,3,4) where you wish to store it.

#### [Protecting Memorized Data]

The data stored in Registration Memory will be retained for at least a week, even when the power is turned off. The memorized data can also be stored by transferring it to a Registration Pack or cassette tape. (See pages 22 and 23.)

#### [Additional Information]

- Registration Memory will not affect the following: Start, Synchro Start, Fill In, Intro/Ending, C.S.P., Transposition, Cassette & Tape, Master Volume, Expression Pedal.
- When using C.S.P., the data stored in Registration Memory will be replaced. (See page 16.)
- When a registration is stored in one of the numbered buttons, the previous contents of that respective memory are automatically replaced.
- If the power is turned off for a long period of time, the sounds stored in the Registration Memory Section will be automatically replaced by the first four sounds from the Registration Menu. The previous registrations will be erased.

## II. What Multi Menu Can Do For You


# 1. You Can Recall 16 Different Registrations

## REGISTRATION MENU

These two menu pages offer 16 preprogrammed registrations that can be used directly from the Multi-Menu, all available at the touch of a button.

REGISTRATION MENU 1	1	2	3	4	5	6	7	8
REGISTRATION MENU 2	9	10	11	12	13	14	15	16

**1** Press one of the buttons in REGISTRATION MENU 1 or 2.

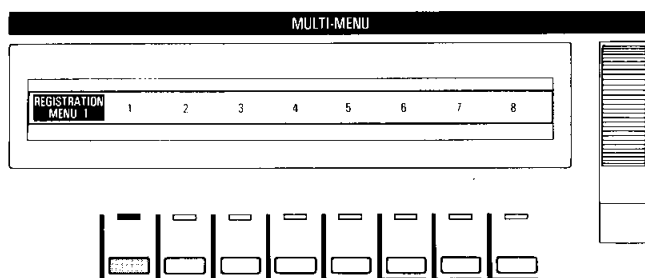

That registration will now be set up on the control panel (including voices on each keyboard, volumes, rhythm selection, effects and A.B.C.)

**2 ...and you're ready to play!**

Start the auto rhythm, and start playing. Take a few moments to listen to the remaining registrations.



### [Altering a Preprogrammed Registration]

When using the Registration Menu, any registration may be altered to any extent by simply changing the selected controls. In fact, you may want to store the "altered" Registration as new registrations in the Registration Memory (ME-50 only).

### [Additional Information]

- The Registration Menu not only uses the sounds normally available on the control panel, but in some cases, the sounds from the Voice Menus have been transferred to the "grey" buttons. (See page 19.)
- All Registration Menu settings have been preprogrammed using the Single Finger (Chord) mode. To use Fingered Chord or Custom A.B.C., press the respective button to alter the setting.

[The preset sounds]


REGISTRATION MENU 1	Music Style	Rhythm used
1	March/Polka	MARCH
2	Pipe organ	(8 BEAT 1)
3	Woodwind ensemble	MARCH
4	Jazz organ	BALLAD
5	Jazz combo 1	SWING
6	Jazz combo 2	BOSSANOVA
7	Big band 1	SWING
8	Big band 2	BALLAD

REGISTRATION MENU 2	Music Style	Rhythm used
9	Country	MARCH
10	String ensemble	8 BEAT 1
11	Pops ensemble 1	8 BEAT 1
12	Pops ensemble 2	LATIN ROCK
13	Pops ensemble 3	SAMBA
14	Fusion sound 1	16 BEAT
15	Fusion sound 2	DISCO
16	Fusion sound 3	BOUNCE

# 2. Programming the Accompaniment

## CHORD SEQUENCE PROGRAMMER

This feature allows you to easily memorize chord progressions as well as registrations one at a time by simply pressing certain buttons.


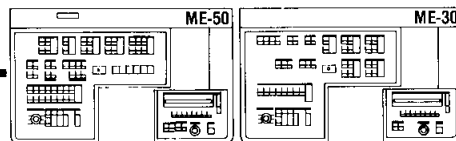


### How to Record a Sequence

#### 1 Set the control panel to the desired registration.

With the ME-50, registrations can be changed while recording. However, be sure to first store all registrations in the Registration Memory before programming.

#### 2 Turn to the Multi Menu page marked C.S.P. RECORD, then while pressing the (C) treble clef button, press the EDIT/CLEAR button.

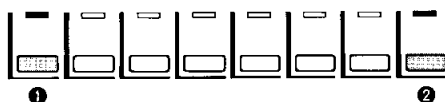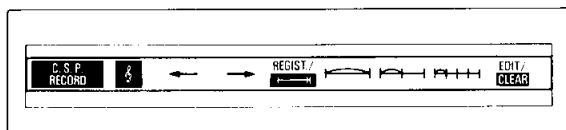



The two SONG buttons will start to flash.

#### 3 Select one of the SONG buttons.

While these buttons are flashing, press one of them. The corresponding lamp for the song you have selected and the EDIT/CLEAR lamp will stay illuminated.



#### 4 While playing the first chord, press a duration button.

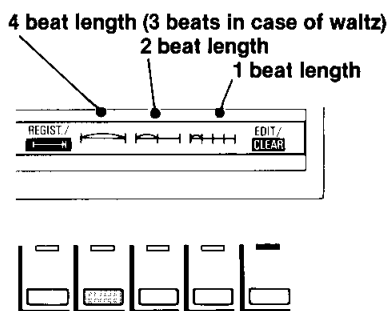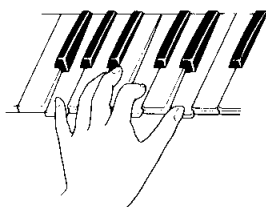

If you wish, you can use the SINGLE FINGER feature from the Auto Bass Chord section, thereby enabling you to memorize the chords by using a single finger. (See page 10 for details).

When a duration button is pressed, you will hear a "beep", indicating that the chord has been stored in memory. Continue programming the remaining chords in this same manner.

Please refer to the separate [Sample C.S.P. Program].

#### [Registrations can be Memorized in C.S.P., too!]

The registrations set using the control panel (including Transferred Voice Menu Sounds, Customized Player Vibrato and Sustain Settings) are automatically memorized at the beginning of the program. The ME-50 also memorizes the sounds stored in Registration Memory.

#### [Memory Capacity]

Each of the SONG buttons can store up to about 150 events such as chords, Fill In, etc., in its memory. When this memory is completely full, a warning sound (3 beeps) will be heard.

#### [No-Chord]


If you wish a measure without Chords, simply press a duration button without playing any notes on the lower keyboard.

#### [Additional Information]

- Before programming, make sure that the SONG 1 and 2 buttons are off before pressing the Treble Clef and EDIT/CLEAR buttons.


**5** If you wish to add a Fill In pattern at any point while pressing the Fill In button, press the REGIST. button.

The Intro./Ending patterns can also be preprogrammed. See [Intro./Ending Program] on the right.

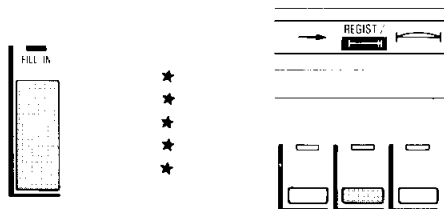


**6** With the ME-50, if registration changes are desired during programming, while pressing the appropriate numbered button in the Registration Memory section, press the REGIST. button.

From this point on, the new registration will be used.

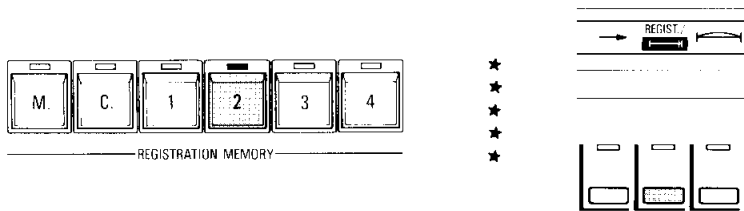


**7** When you have completed the chord sequence, end the program by holding the treble clef button and press the REGIST./ending ( ) button.

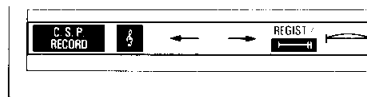


**8** Turn OFF the EDIT/CLEAR button.

Because the SONG button remains ON though the EDIT/CLEAR button is turned OFF, if the rhythm is started in that status, you can play back the chord progressions that you just recorded. Moreover, if you wish to record on another SONG button, turn the SONG button that is ON to OFF then perform Steps 1 to 8.

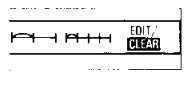

**[Intro./Ending Program]**


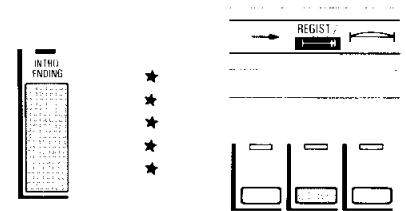


**Intro.:** At the beginning of the program, while pressing the INTRO./ENDING button, press the REGIST. button. Next, press the ( ) button to ensure that no chords are heard during this one measure introduction.

**Ending:** At the beginning of the second measure from the end of the song, while pressing the INTRO./ENDING button, press the REGIST. button, thereby programming a two-measure ending.

**[Additional Information]**


- Before turning off the EDIT/CLEAR, you may want to check what you have programmed and make any corrections that you feel are necessary. (See page 18 for details on how to EDIT.)
- Even if you don't use the ending symbol, it will automatically be added at the end of a SONG when the EDIT/CLEAR button is turned off.
- It is not possible to consecutively memorize different registrations without musical data between them. If you made a mistake in registration during programming, press the (←) button and then enter the correct registration.

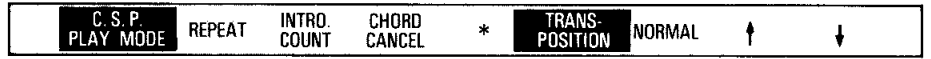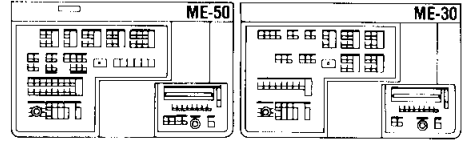

## How to Play back a Sequence


### 1 Select one of the SONG buttons.

The registration memorized for the beginning of the song will be set up on the control panel.

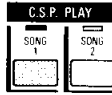


### 2 Turn to the C.S.P. Play Mode page in the Multi Menu. If you wish, you can now select either the REPEAT or INTRO. COUNT functions.

REPEAT provides a continuous playback of the sequence until it is stopped. INTRO. COUNT provides one measure of "metronome" (count-off) before the actual playback of the sequence starts.

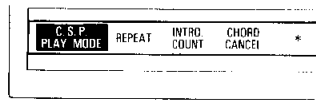

### 3 Start playback by turning on the auto rhythm.


Adjust the rhythm tempo and press the START switch. Playback will commence.

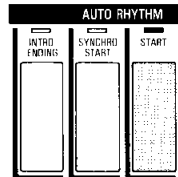



### 4 You may now play the melody while the lower keyboard and pedal keyboard accompaniment are being played back automatically as programmed.

You may now play a melody on the upper keyboard along with this accompaniment. The registrations will also change automatically as programmed.

When playback has been completed, the auto rhythm will stop (unless REPEAT is on).

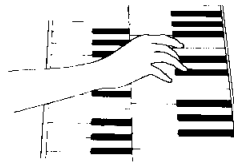

#### [Chord Cancel]

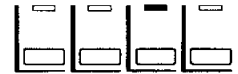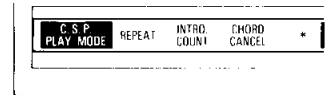

This button cancels the playback of the chord and bass accompaniment. The programmed material that will now be played back will be the initial rhythm selected and any Fill Ins and/or Intro./Ending programmed. Because the ME-50 also allows registration changes during programming (by using its Registration Memory), the C.S.P. can be used as a "Registration Sequence Programmer" as well.

#### [Protecting C.S.P. Data]

The memorized data will be retained in the C.S.P. memory for at least one week even if the power is turned off.

If you wish to store these sequences for a longer period of time, you can use RP-1 packs (ME-50 only) or cassette tapes for this purpose. (See pages 22-23 for details.)


#### [Additional Information]

- The C.S.P. Play Song buttons will operate at any time regardless of the position of the Multi-Menu.
- You can also manually change registrations during C.S.P. playback from the control panel without affecting the contents of C.S.P. memory.
- When the C.S.P. Play Song 1 or 2 buttons are pressed, the control panel settings (and Registration Memory contents—ME-50 only) will be replaced by those used during programming (Recording).




## Making Changes/Corrections in the Sequence

**1** Press the EDIT/CLEAR button, and while the SONG lamps are flashing, select one of them.

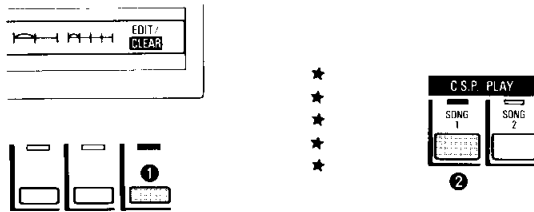

The registration memorized for the beginning of the SONG is immediately set up on the control panel, and the first memorized chord will be heard. One of the duration buttons will also be illuminated.

**2** Check each item, one at a time, using the (→) data pointer shift button.

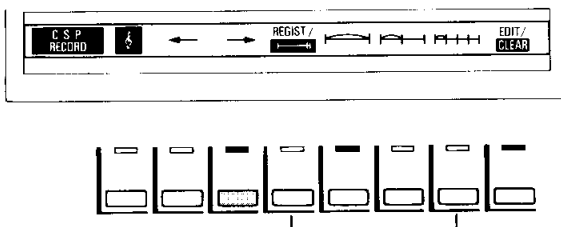


(One of these lamps will light up, indicating what has been memorized.)

Every time the (→) button is pressed, the data pointer will advance to the next item. The information stored at each item is indicated by sounds and lamps in the following manner:

**Chords:** The memorized chord will be heard and the corresponding duration button will light up.

**Fill In, Intro./Ending or Altered Registration:** The REGIST. lamp lights up, no sound is heard, and the FILL IN or INTRO./ENDING lamp will be illuminated. With the ME-50, if registrations have been changed, the REGIST. lamp lights up and the control panel is changed to the new registration.

**3** If you detect any errors or wish to make any changes, make them in the following way.

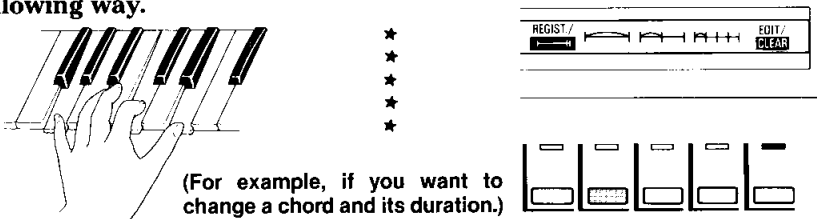

(For example, if you want to change a chord and its duration.)

When making Changes/Corrections, move the data pointer to the point where you wish to make the change and do the following:

**Chord correction:** While playing the correct chord, press a duration button.

**Duration correction:** While playing the same chord, press the correct duration button.

**Inserting Fill In, Intro./Ending or Registrations:** First move the data pointer to the next data point after the desired position of insertion. Next, turn on FILL IN or INTRO./ENDING then press the REGIST. button. With the ME-50, changing to a different numbered button in the Registration Memory then pressing the REGIST. button allows a new registration to be inserted.

**4** Turn the EDIT/CLEAR button off.

### [Various ways of using the data pointer shift buttons]

There are four different ways you can use the data pointer. They are shown in the following table:

→	Advances to the next item (one at a time).
←	Moves back to the preceding item (one at a time).
🎵 →	Immediately advances to the last item in the sequence.
🎵 ←	Immediately moves back to the first item in the sequence.

### [Revising a Preprogrammed Registration]

If the data pointer is at the very beginning of a song, you can change the beginning registration by changing to your new registration and then pressing the REGIST. button.

With the ME-50, while EDIT/CLEAR is on, if a new (or revised) registration is stored in Registration Memory, it can also be inserted into the program (see item #3 on the left).

### [Checking with the rhythm on]

While EDIT/CLEAR is on, when the rhythm is started, the programmed accompaniment will be played exactly as it would during normal playback. However, in this mode it is possible to stop the auto rhythm at any time during playback to correct any errors found.

### [Additional Information]

- When you want to check or correct items after the EDIT/CLEAR button has been turned off, you must turn on the EDIT function. IMPORTANT! If the [🎵] and EDIT/CLEAR buttons are pressed at the same time, all of the memorized information will be erased.
- During the EDIT process, the original length of a song can only be altered by adding chords after the very last bit of data in the program.

# 3. 22 additional voices can be transferred to the control panel.


## VOICE MENU

You can choose your favorites from among these 22 voices and transfer them to the grey buttons on the control panel.


<b>VOICE MENU 1</b>	PIPE ORGAN	COSMIC BRASS 1	COSMIC BRASS 2	PIANO	ELECTRIC PIANO	HARPSI-CHORD	ORIGINAL VOICE	MENU ON
<b>VOICE MENU 2</b>	ACOUSTIC GUITAR	ELECTRIC GUITAR	JAZZ GUITAR	STEEL GUITAR	DISTORTION GUITAR	CLAVINET	TIMPANI	WHISTLE
<b>VOICE MENU 3</b>	PAN FLUTE	CLARINET	FLÜGEL HORN	SOPRANO-SAX	HARMONICA	COSMIC 1	COSMIC 2	CONTRA BASS

## How to Transfer Sounds


**1** Display the VOICE MENU 1 panel and turn on the MENU ON button.

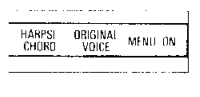

**2** Decide which voice you wish to transfer and where you want to transfer it.

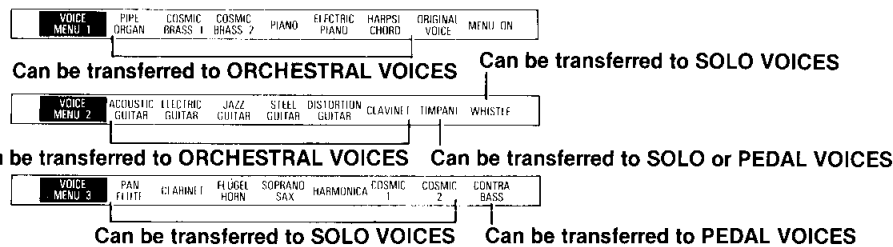


(Illustration of ME-50)

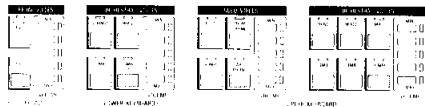

The grey buttons are located in the lower right corner of the voice sections. You can transfer any voice you want to any voice section.

**3** While holding the button corresponding to the voice you'd like to transfer, press one of the grey buttons to indicate where you want to put that sound.

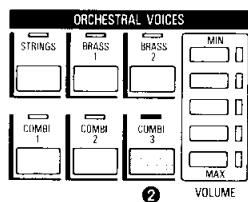

The light above the grey button you just pressed will start to flash, indicating that the sound has been transferred. Now, try transferring other voices in a similar manner.


## Cancelling and Recalling

**1** Turn off the MENU ON button.

At this time, the voices transferred to the grey button (in the various voice sections) will be cancelled and these grey buttons will now contain the voices indicated above each of them.

**2** Turn on the MENU ON button.

The VOICE MENU sounds that were previously transferred to the grey buttons will now be recalled. These sounds will remain as transferred regardless of the page displayed on the MULTI MENU.

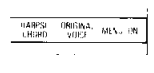


### [Checking the transferred Voices]

When the MENU ON button is on, and you press a grey button, the voice which has been transferred to that grey button will illuminate on one of the pages of VOICE MENU. If no voices have been illuminated on that Voice Menu, be sure to check the other Voice Menus.

If no voice had been transferred to that grey button, the light corresponding to "ORIGINAL VOICE" will illuminate, meaning that the sound indicated above that grey button has not been changed.

### [ORIGINAL VOICE]

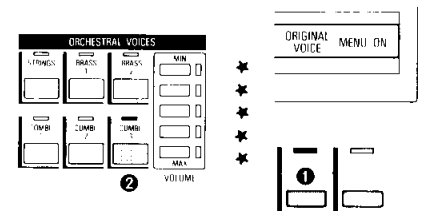

By pressing this button, you can cancel the VOICE MENU sounds transferred to the grey buttons, one at a time, thereby returning these grey buttons to the voice indicated on the control panel. To operate, hold the ORIGINAL VOICE button, and press the grey button that you wish to cancel.



### [Additional Information]

- The voices transferred to grey buttons can be memorized in the C.S.P. and REGISTRATION MEMORY (ME-50 only).
- The voices transferred to the grey buttons can be stored for at least a week without being erased even if the power is turned off.
- When VOICE MENU settings have been transferred to SOLO or PEDAL VOICES, they automatically become "monophonic" voices, meaning that only one note at a time can be played.
- The 22 voices can all be transferred to any desired voice section. Note, however, that due to differences in the pre-programmed vibrato effect for each voice, voices transferred to sections other than those mentioned in step 2 will give a somewhat different impression than intended. In such a case, the original characteristics of that voice can be obtained by changing the Player Vibrato setting. (Please see page 20).
- The same voice can also be transferred to the grey buttons in more than one section.


# 4. You Can Also Memorize Vibrato and Sustain Effects

## PLAYER VIBRATO


A vibrato effect, where appropriate, is already incorporated into the SOLO VOICES and ORCHESTRAL VOICES of the upper keyboard. However, you can alter the degree of the Vibrato effect to suit your personal taste, and this change can also be stored in memory.

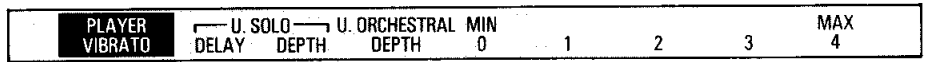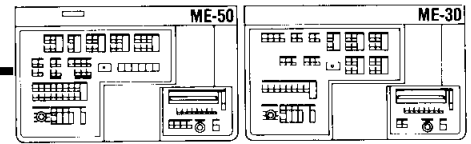

**1** On the control panel, turn on the **PLAYER VIBRATO SOLO** button, then select a **SOLO VOICE**.

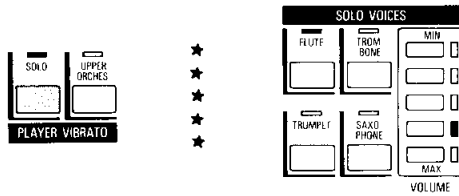


**2** In the **MULTI MENU**, press the **U.SOLO DEPTH** button, then select the level of **Vibrato Depth** you prefer.

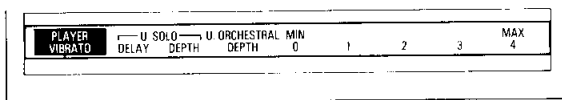

While actually playing a note, press one of the 5 degrees buttons. The larger the number, the stronger the vibrato effect obtained. If you choose the 0 button, no vibrato effect will be added.

**3** Turn on the **U.SOLO DELAY** button, then set your desired **Delay** level.

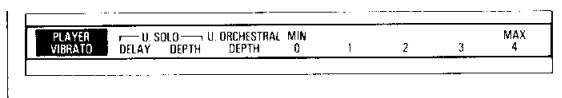

Similarly, you may choose from a total of 5 buttons. The larger the number, the longer it will take for vibrato to be added after pressing a key on the upper keyboard.




**4** Turn this **SOLO** button on, whenever you wish to add your customized vibrato.

Your memorized vibrato settings can be added to the Solo Voices at any time by simply turning this button on.




### [Memorizing vibrato for UPPER ORCHESTRAL VOICES]

- 1) On the control panel, turn on the **PLAYER VIBRATO UPPER ORCHES.** button, then select a voice from **ORCHESTRAL VOICES** on the upper keyboard.
- 2) Turn on the **U. ORCHESTRAL DEPTH** button, then select the level of **Vibrato Depth** you prefer.

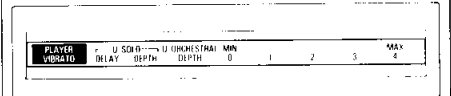

- 3) By turning on the **PLAYER VIBRATO UPPER ORCHES.** button on the control panel, your customized **Vibrato** effect will be obtained.

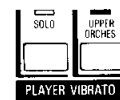


### [Additional Information]

- A customized vibrato setting will be memorized into the C.S.P. or Registration Memory (ME-50 only).
- The vibrato setting memorized in the **PLAYER VIBRATO** memory will be stored for at least a week without being erased, even if the power is turned off.




# SUSTAIN



This Multi Menu page permits you to memorize a Sustain effect for each keyboard.

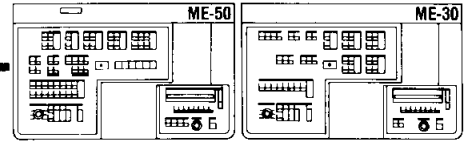

**1** Turn on the **SUSTAIN UPPER ORCHES.** button, then select a voice from **ORCHESTRAL VOICES** on the upper keyboard.

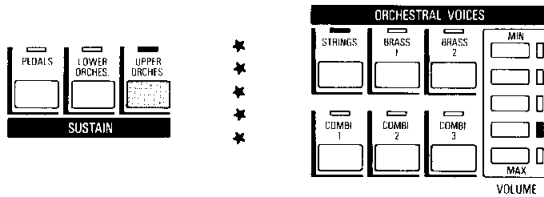


**2** In the **MULTI MENU**, press the **UPPER ORCHES.** button then set the Sustain length of your choice.

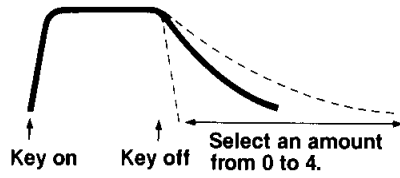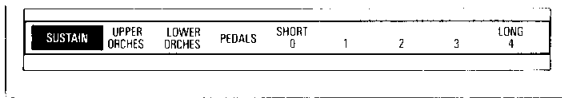

While actually pressing and releasing a note, choose one of these 5 buttons. The larger the number, the longer the note will sustain (or "linger") after a Key is released.


**3** Turn the **UPPER ORCHES.** button on, whenever you wish to add your desired sustain level to the upper keyboard.

Your memorized sustain settings can be added to the upper ORCHESTRAL VOICES section at any time by simply turning this button on.

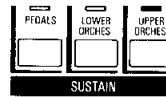


## [Memorizing sustain effect for the PEDAL VOICES or Lower ORCHESTRAL VOICES]

- 1) On the control panel, turn on SUSTAIN PEDALS, then select a Pedal voice.
- 2) Press the PEDALS button on the MULTI-MENU Sustain page, then set the Sustain length to your desired level.

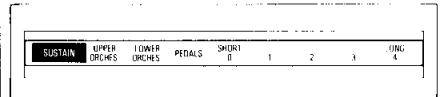

3) By turning on SUSTAIN PEDALS on the control panel, your customized Sustain effect will be produced.

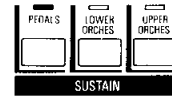

The Sustain effect for the LOWER ORCHESTRAL VOICES can also be memorized by using this same procedure.


## [Additional Information]

- Customized Sustain settings will be memorized into the C.S.P. or Registration Memory (ME-50 only).
- The sustain setting memorized in the SUSTAIN memory will be stored for at least a week without being erased, even if the power is turned off.

# 5. Transposing

## TRANSPOSITION



This feature allows you to change the key of the entire instrument in half step increments.

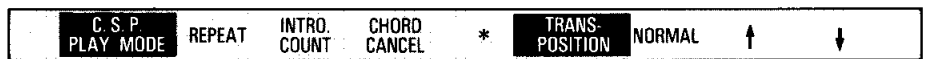

**1** Press the (↑) or (↓) button.

**(↑) button:** The pitch will be raised by a one-half step each this button is pressed. (Maximum: 6 steps)

**(↓) button:** The pitch will be lowered by a one-half step each time this button is pressed. (Maximum: 6 steps)

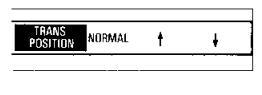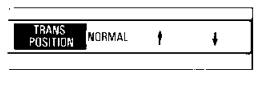

**2** Press the **NORMAL** button to return your Electone to the normal key.

You can also return to the normal key by turning the POWER switch off and on.


## [Additional Information]

- The lamps corresponding to the (↑) button and (↓) button indicate whether the instrument's key is currently below or above normal.
- Transposition will not be memorized in C.S.P. or the Registration Memory.


# 6. Transferring Memorized Information to a Cassette or Pack

## CASSETTE & PACK (ME-50) • CASSETTE (ME-30)

The C.S.P. data memorized in the Electone can be transferred to a cassette tape. With the ME-50, C.S.P. and Registration Memory Data can be transferred to either a cassette tape or a Registration Pack.

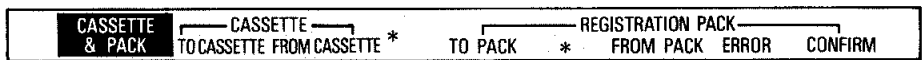


(ME-50)

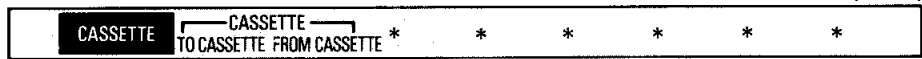

(ME-30)

### TO CASSETTE

- 1 Connect a data recorder to the Electone.

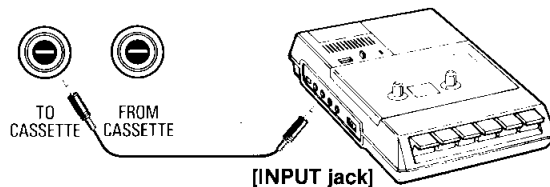


Connect the TO CASSETTE jack on the Electone to the IN (or MIC) jack on your data recorder using a shielded cable. Then insert a cassette tape. (Though an ordinary audio cassette recorder can be substituted for the data recorder, the use of a recorder specifically designed for data recording is recommended.)

- 2 Press the RECORD button on the data recorder.

If your recorder has a counter, you may wish to note the starting and ending numbers to facilitate later use.


- 3 Turn to the Multi Menu page marked "Cassette" (or Cassette & Pack ME-50), press the TO CASSETTE button.

This starts the transfer of the C.S.P. data (and also Registration Memory data on the ME-50) in the Electone to the cassette tape. During this procedure, the TO CASSETTE indicator lamp will stay on. Once this procedure is completed, a buzzer will sound, the lamp will flash briefly, then go off. When the lamp goes out, press the STOP button of the data recorder.

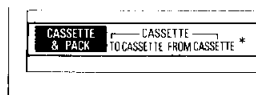

### FROM CASSETTE

- 1 Connect a data recorder to the Electone.

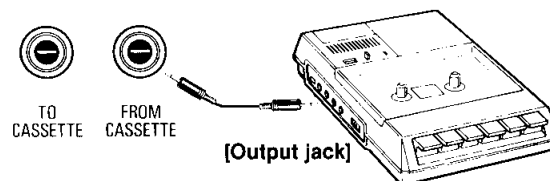

Connect the FROM CASSETTE jack on the Electone to the OUT (or EAR) jack on your data recorder using a shielded cable. Insert the cassette tape on which you have saved the desired data and rewind it to the point where the saving operation was started.

Set the playback volume of the data recorder to a level slightly higher than medium level.

- 2 Press the FROM CASSETTE button in Multi Menu.



- 3 Press the PLAY button on the data recorder.

This starts the transfer of the data from the cassette tape to the Electone. During this procedure, the FROM CASSETTE indicator lamp will stay on. Once this operation is completed, a buzzer will sound, the lamp will flash briefly, then go off.

When the lamp goes out, press the STOP button of the data recorder.

#### [When Data Cannot be Transferred]

When the TO CASSETTE procedure has not been properly performed, the TO CASSETTE lamp will remain illuminated. When the FROM CASSETTE function has not been properly performed, either three warning beeps are sounded or the FROM CASSETTE lamp remains lit up. In such cases, confirm the checkpoints below:

- (1) Is the cable between the Electone and data recorder securely connected?
- (2) Are the connecting jacks plugged into the proper sockets or is there an error in the operating procedure?
- (3) Is the playback volume of the recorder at the proper level?  
When the VOLUME control has a 10-step scale, set the volume from 6 to 8.
- (4) Is the recording head dirty?
- (5) Is the proper cassette tape being used?  
\* Be sure to use a tape specifically designed for computer use or a normal low-noise audio tape (30- or 45-min. tape).  
\* Use only new tapes whenever possible.  
\* Check the tape for twists, seams, wrinkles, etc. (When using tape with a "leader" (i.e. normal audio tape), fast forward the tape past this "leader".)
- (6) Is an appropriate recorder being used?  
With an ordinary audio cassette recorder, some of its characteristics may render it unusable for data recording or cause difficulties in recording. Use of a data recorder is strongly recommended.


#### [Additional Information]

- The TO CASSETTE or FROM CASSETTE procedure normally requires about 15 seconds with the ME-50, and about 6 seconds with the ME-30.
- During the TO CASSETTE or FROM CASSETTE procedure, you cannot play your Electone. Also, all indicator lamps on the control panel will go out.
- When the FROM CASSETTE procedure is performed, any data previously stored in the Electone will be erased.

## TO PACK (ME-50 only)


### 1 Insert the pack.

As shown in the illustration, firmly insert a pack (RP-1) with the labeled surface facing forward.

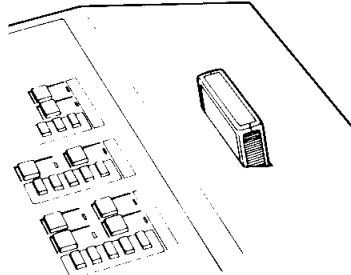

### 2 While pressing the CONFIRM button, press the TO PACK button.

The TO PACK lamp lights up briefly, indicating that the data (C.S.P. and Registration Memory) has been transferred to the pack.

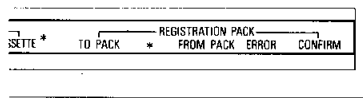


### 3 Remove the pack.

## FROM PACK (ME-50 only)

### 1 Insert the pack.


### 2 While pressing the CONFIRM button, press the FROM PACK button.

The FROM PACK lamp lights up briefly, indicating that the data has been transferred from the pack to the Electone.

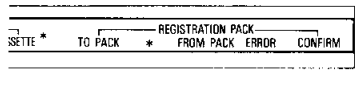


### 3 Remove the pack.

### [ERROR]

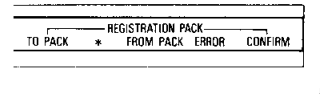

When the pack has been incorrectly inserted, or when the data has not been saved properly, a buzzer will sound three times and the ERROR indicator lamp will start to flash.

### [Preventing Erasure of Pack Data]

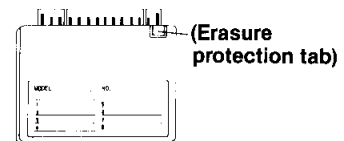

When you want to protect data saved in an RP-1 pack from being erased, please break out the erasure protection tab on the pack. If this tab is broken out, the contents of the pack can not be changed, even when the TO PACK button is pressed. This will make sure that you do not erase any valuable data by mistake.

### [Additional Information]

- When the TO PACK operation is performed, any data previously stored in that pack is erased.
- When the FROM PACK operation is performed, any data previously stored in the Electone is erased.
- To create your own library of Registrations and Chord Sequence Programs, additional RP-1 packs are available for purchase at authorized Yamaha Electone dealers.
- Data stored on cassette tape or packs contains model identification information. This information prevents the transfer of data between different models.

## ACCESSORY JACKS AND OPTIONAL ITEMS

### ● HEADPHONES Jack

This jack is used to connect headphones (optional). When headphones are connected, there will be no sound from the Electone's speakers. This allows you to play your Electone at any time without disturbing others.

**IMPORTANT:** Do not use this jack for any purpose other than headphones!



### ● AUX. OUT Jack

This jack is used to produce a more powerful sound by connecting an external amplifier or other devices. If this jack is connected to the LINE IN jack of a tape recorder, direct recording is also possible. (Nominal Impedance: 470Ω)




### ● EXP. IN Jack

This jack accepts a monaural signal from a synthesizer or similar accessory. The volume of the equipment connected here will be controlled by the Electone Expression Pedal.




### ● MIDI IN/OUT Jacks

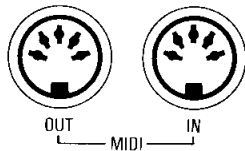

The MIDI (Musical Instrument Digital Interface) terminals

conform to the MIDI standard for digital electronic instruments. These jacks enable you to connect your Electone to a computer or other MIDI compatible electronic instruments for data communication.

### ● TO CASSETTE/FROM CASSETTE Jacks

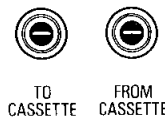

These jacks are used to connect the Electone to cassette recorders for data transmission/reception. (See page 22 for details.)

**WARNING:** The connection or disconnection of any accessory, (other than headphones) while the Electone is ON, can result in extensive damage to the Electone and/or the accessory. Damage caused by the improper connection/disconnection of accessories is not covered by the manufacturer's warranty.

### ■ OPTIONAL ITEMS

#### ● Keyboard Amplifier (KA-10)

If you wish to enjoy a more powerful sound, please purchase the exclusive Keyboard Amplifier KA-10. When using the KA-10, connect the ME Electone AUX. OUT jack and the KA-10 AUX. IN jack. Then install by hanging it under the steel rail between the side boards.

#### ● Registration Pack (RP-1) (for ME-50)

## ELECTROMAGNETIC INTERFERENCE

"Interference" can be a two way street; something you are operating can interfere with others or, something someone else has may interfere with something of yours.

Naturally, it is also possible that two or more of your own electronic (electric) devices may interfere with each other. Your Electone has been designed to minimize all these possibilities and meets all applicable standards worldwide.

Electromagnetic interference with your Electone can show itself in variety of ways. You may hear speech, music, "beeps", static, or a buzzing sounds. Yamaha Electones are designed to reject RF (radio frequency) signals that are many times the levels found in any normal environment. If, however, you are in the immediate proximity of a very high power transmitter, some interference may still occur. If this should happen, please try to identify the radio (TV) station and record the time of day that the interference occurs. Station identification is essential in order that the offending frequencies can be established and the authorized (legal) operating power level of the transmitter causing the interference can be verified. If the interference continues, please follow the corrective measure suggestions provided later in this section.

If the interference is in the form of occasional buzzing or static, it is highly probable that the cause can be traced to the turning on or off of some household appliance. The offending appliance can also be outside your own residence. Usually a "time" pattern

(i.e., evenings only, etc.) will be involved. Noises of this type rarely originate in the Electone itself. If the condition continues, please contact your local authorized Yamaha Electone dealer for assistance.

Main power line disturbances and electrical storms (lightning) can also be the source of static interference. Generally speaking, problems generated by these two sources will also be present in your other audio or video equipment. Lightning can also be very destructive. The following special warning also applies to virtually all electronic products.

### IMPORTANT NOTICE


Modern electronic products, (i.e., computers, video games, electronic organs, etc.), contain components that, under normal conditions, extend the service free life of the products they make up an almost unbelievable period of time. This is especially true when you consider the vast number of equivalent components incorporated within one given part. These "parts," called "integrated circuits," are however, subject to destruction by high voltage discharges, such as a close proximity lightning strike. This can occur even if the unit is turned off.

IN PERIODS OF ELECTRICAL STORM PROBABILITY, IT IS ADVISABLE THAT YOU DISCONNECT ANY ELECTRONIC DEVICE NOT ACTUALLY IN USE, FROM ITS WALL SOCKET.

# INSTALLATION AND MAINTENANCE

## ● Installation

- 1. WARNING:** Do not allow your Electone or its bench to rest on or be installed over power cords of any type. An electrical shock and/or fire hazard could possibly result from this type of improper installation.
- 2. WARNING:** Do not place objects on your Electone power cord or place it in a position where anyone could trip over, walk on or roll anything over it. An improper installation of this type creates a personal injury/fire hazard possibility.
- 3. Main Power Supply Verification:** Your Electone has been manufactured specifically for the main supply voltages used in your area. If you should move, or if any doubt exists, please consult your local authorized Electone dealer for instructions. The main supply voltage is printed on the name plate.

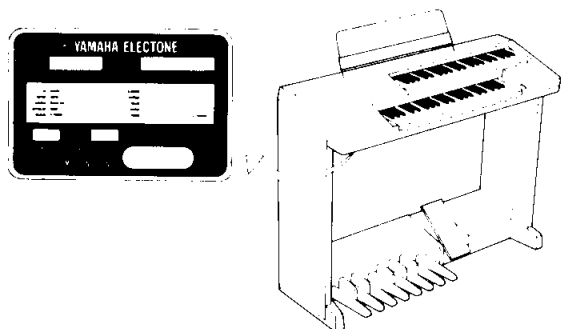

- 4. Environment:** Your Electone should not be installed in a position that exposes the cabinet to direct sunlight or air currents having high humidity or heat levels. This type of installation can cause contact oxidation, case joint separation, and cabinet finish problems.
- 5. Vinyl Products:** Do not set vinyl items, (i.e., headphones, vinyl doilies, etc.) on the finished surfaces of your Electone or use a polyvinyl material to cover the unit for any extended period of time. A chemical reaction may occur between the finish chemical and those contained in the polyvinyl products resulting in a permanent marring of the finish.
- 6. Electromagnetic Interference (RFI):** Your Electone has been type tested and found to comply with all applicable regulations. However, if it is installed in the immediate proximity of other electronic devices, some form of interference may occur.

## ● Maintenance

- 1. SERVICE:** Your Electone contains no user serviceable components. Refer all service to qualified service technicians only.
- 2. BENCH STRUCTURAL INTEGRITY:** If any motion or an "unsteady" sensation is noted in the bench, please check its structural integrity immediately. Discontinue use until any and all discrepancies are resolved.
- 3. CLEANING/CARE**
  - A) GENERAL:** DO NOT use chemically harsh (i.e., alcohol, paint thinners, etc.) or abrasive cleaners on any portion of your Electone.
  - B) KEYS/CONTROL PANEL:** When cleaning the keys and control panels of your Electone, please use a soft absorbent-type cloth that has been dampened with a very mild solution of liquid soap and lukewarm water.
  - C) CABINET/BENCH:** Clean the cabinet portions of your Electone with a slightly dampened cloth containing a neutral cleaning agent. The cleaning agent selected should not contain a high wax content or any other substance that would have a tendency to form a "build-up" on the cabinet.
- 4. Vinyl Products:** Do not set vinyl items, (i.e., headphones, vinyl doilies, etc.) on the finished surfaces of your Electone or use polyvinyl material to cover the unit for any extended period of time. A chemical reaction may occur between the finish chemical and those contained in the polyvinyl products, resulting in a permanent marring of the finish.

**IMPORTANT NOTICE:** This product has been tested and approved by independent safety testing laboratories in order that you may be sure that when it is properly installed and used in its normal and customary manner, all foreseeable risks have been eliminated. DO NOT modify this unit or commission others to do so unless specifically authorized by the manufacturer. Product performance and/or safety standards may be diminished. Claims filed under the expressed warranty terms may be denied if the unit is/has been modified. The warranty of title (patent infringement, etc.) will not be defended by the manufacturer in the area(s) that relate to the modification. Implied warranties may also be affected.

## FCC INFORMATION (USA)

While the following statements are provided to comply with FCC Regulations in the United States, the corrective measures listed are applicable worldwide.

The digital series of Yamaha Electones™ use frequencies that appear in the radio frequency range, and if installed in the immediate proximity of some types of audio or video devices within three meters (approximately ten feet), interference may occur.

This series of Yamaha Electones™ has been type-tested and found to comply with the specifications set for a class B computer in accordance with those specifications listed in sub-part J, part 15 of the FCC rules. These rules are designed to provide a reasonable measure of protection against such interference. However, this does not guarantee that interference will not occur.

If your Electone™ should be suspected of causing interference with other electronic devices, verification can be made by turning your Electone™ off and on. If the interference continues when your Electone™ is off, the Electone™ is not the source of the interference. If your Electone™ does appear to be the source of the interference, you should try to correct the situation by using one or more of the following measures:

- Relocate either the Electone™ or the electronic device that is being affected by the interference.
- Utilize power outlets for the Electone™ and the device being affected that are on different branch (circuit breaker or fuse) circuits, or install AC line filters.
- In the case of radio-TV interference, relocate the antenna or if the antenna lead-in is 300 ohm ribbon lead, change the lead-in to coaxial type cable.

If these corrective measures do not produce satisfactory results, please contact an authorized Yamaha Electone™ dealer for suggestions and/or corrective measures. If you can not locate an authorized Yamaha Electone™ dealer in your general area, please contact the Electone™ Service Department, Yamaha International, 6600 Orangethorpe Ave., Buena Park, CA 90620, U.S.A.

If for any reason, you should need additional information relating to radio or TV interference, you may find a booklet prepared by the Federal Communications Commission Helpful: "How to Identify and Resolve Radio-TV Interference Problems." This booklet, Stock #004-000-00345-4, is available from the US Government Printing Office, Washington DC. 20402.

# TROUBLESHOOTING

Phenomenon	Cause and Solution
Only one sound is heard when two notes are simultaneously played on either the pedal keyboard, or when Solo Voices are used by themselves.	For practical performance reasons, this Electone has been designed so that only one note can be played at a time on the pedal keyboard or with the Solo Voices. (See page 5.)
VOICES for each keyboard have been selected and keys are pressed, but no sound is produced.	First check the MASTER VOLUME and EXPRESSION PEDAL, then check if the volume levels of the desired VOICE sections are set to MIN. To produce sound from the pedal keyboard, turn off SINGLE FINGER and FINGERED CHORD in the AUTO BASS CHORD section. (See pages 4-5.)
The Arpeggio Chord feature does not seem to work.	The Arpeggio Chord function is synchronized with, and controlled by, the Auto Rhythm section, and therefore, rhythm must be "on" for this feature to operate. (See page 6.)
When you lift your hand off the lower keyboard and no pedals are being played, the rhythm, lower keyboard and pedal sounds stop.	When the Synchro Start function is used, the rhythm stops when both the lower keyboard and the pedal keyboard are not being played. If you want the sounds to continue, turn on the Auto Bass Chord MEMORY feature. (See page 10.)
When using the Single Finger function, the chord does not change even when you press different keys.	When the lower keyboard is played legato style, the chords may not change properly even though you are pressing different keys. You must lift your fingers completely from the keyboard when changing chords. (See page 10.)
No harmony sounds are heard even though the Melody On Chord section is turned on.	When using Melody On Chord, the harmony sounds are provided by the Orchestral Voices section of the upper keyboard. You must select a voice in this section, and adjust the volume. (See page 12.)
Some functions cannot be memorized in the Registration Memory. (ME-50)	The following functions cannot be memorized: Auto Rhythm Start, Synchro Start, Intro/Ending, Fill In, Master Volume, Transposition, Expression Pedal, etc. (See page 13.)
EDIT/CLEAR of C.S.P. cannot be turned on.	This is because the SONG 1 or 2 button is on. Turn Song 1 or 2 off, press EDIT/CLEAR then a song button. (See page 15.)
Some/All chords were not memorized in the C.S.P.	Possibly the Duration button was pressed after you had lifted your fingers off the lower keyboard. To enter chord data into the C.S.P., you must press the Duration button while holding a chord. (See page 15.)
When programming C.S.P., three warning beeps are sounded.	When the memory capacity of a C.S.P. program has been reached, three warning beeps sound, indicating that further programming is impossible. (See page 15.)
After playing back C.S.P., the registrations which were previously memorized in Registration Memory are no longer there.	When a C.S.P. is played back, the contents of the Registration Memory when the C.S.P. was originally programmed replaces the current settings in the Registration Memory. If you wish to preserve the current settings, first transfer them to a registration pack (RP-1) or cassette tape. (See pages 17, 22, 23)
When a "grey" button is pressed, a sound other than the displayed sound is produced.	This is because a voice had been transferred to that position from a VOICE MENU. When the original (labeled) sound is not desired, turn off the (Voice) MENU ON button. (See page 19.)
Although the Player Vibrato or Sustain button is on, no effect is obtained.	The Player Vibrato and Sustain settings must first be memorized in the appropriate section of the Multi Menu. (See page 20-21.)
The FROM CASSETTE operation is performed, but data is not transferred to the Electone.	Check the cord connection, procedures, playback volume of the recorder, type of cassette tape and recorder being used, etc., then repeat the FROM CASSETTE procedure. If an error re-occurs, replace the recorder. (See page 22.)
The TO PACK operation is performed, but an error occurs and data is not transferred to the pack.	Reconfirm that the pack was properly inserted and check the status of the erasure protection tab, then repeat the TO PACK procedure. Note: the battery which powers the Registration Pack has a life expectancy of about five years. (See page 23.)
The control panel or similar parts do not function normally or the memorized data changes in content.	Though a rare occurrence, electrical disturbances (such as that caused by lightning) may cause abnormal functioning of the Electone or changes in memorized data. In these instances, turn off the POWER switch, then turn it on again while depressing the leftmost Multi-Menu button. The Multi-Menu can be turned to any page except CASSETTE (or CASSETTE & PACK ME-50).

# SPECIFICATIONS

\*Specifications subject to change without notice.

		ME-50	ME-30
<b>KEYBOARD</b>		UPPER: 44 KEYS (f~c4), LOWER: 44 KEYS (F~c3), PEDALS: 13 KEYS (C~c)	
<b>UPPER ORCHESTRAL VOICES</b>		STRINGS, BRASS 1•2, COMBI. 1•2•3, VOLUME	STRINGS, BRASS COMBI. 1•2, VOLUME
<b>UPPER SOLO VOICES</b>		FLUTE, TROMBONE, TRUMPET, SAXOPHONE, VOLUME	
<b>LOWER ORCHESTRAL VOICES</b>		STRINGS, BRASS, COMBI. 1•2, VOLUME	
<b>PEDAL VOICES</b>		ELECTRIC BASS, BASS, VOLUME	
<b>ARPEGGIO CHORD</b>		1•2•3•4, VOLUME	
<b>EFFECTS</b>	<b>TREMOLO/SYMPHONIC</b>	TREMOLO/SYMPHONIC=TREMOLO, SYMPHONIC, UPPER ORCHES., LOWER ORCHES.	TREMOLO=TREMOLO, UPPER ORCHES., LOWER ORCHES.
	<b>GLIDE</b>	GLIDE (FOOT SWITCH)	
	<b>PLAYER VIBRATO</b>	SOLO, UPPER ORCHES.	
	<b>SUSTAIN</b>	UPPER ORCHES., LOWER ORCHES., PEDALS	
<b>AUTO RHYTHM</b>	<b>PATTERNS</b>	MARCH, TANGO, WALTZ 1•2, BALLAD, SWING, BOSSANOVA, SAMBA, LATIN, LATIN ROCK, SLOW ROCK, BOUNCE, 8 BEAT 1•2, DISCO, 16 BEAT	MARCH, TANGO, WALTZ, BALLAD, SWING, SAMBA, BOSSANOVA, LATIN ROCK, LATIN, BOUNCE, SLOW ROCK, 8 BEAT 1•2, DISCO, 16 BEAT
	<b>CONTROLS</b>	VOLUME, START, SYNCHRO START, TEMPO, TEMPO LAMP, FILL IN, FILL IN VARI., INTRO./ENDING, EXTRA PERCUSSION	
	<b>FOOT SWITCH</b>	RHYTHM STOP, FILL IN, ENDING, (GLIDE)	
<b>AUTO BASS CHORD</b>		SINGLE FINGER, FINGERED CHORD, CUSTOM A.B.C., MEMORY	
<b>MELODY ON CHORD</b>		1•2•(1+2)	
<b>REGISTRATION MEMORY</b>		MEMORY, CANCEL, 1•2•3•4	
<b>C.S.P. PLAY</b>		SONG 1•2	
<b>MULTI-MENU</b>	<b>REGISTRATION MENU 1</b>	1•2•3•4•5•6•7•8	
	<b>REGISTRATION MENU 2</b>	9•10•11•12•13•14•15•16	
	<b>C.S.P. RECORD</b>	[RECORD], ←, →, REGIST./[STOP], [REPEAT], [EDIT/CLEAR]	
	<b>C.S.P. PLAY MODE</b>	REPEAT, INTRO. COUNT, CHORD CANCEL	
	<b>TRANSPOSITION</b>	NORMAL, ↑, ↓	
	<b>VOICE MENU 1</b>	PIPE ORGAN, COSMIC BRASS 1•2, PIANO, ELECTRIC PIANO, HARPSICHORD, ORIGINAL VOICE, MENU ON	
	<b>VOICE MENU 2</b>	ACOUSTIC GUITAR, ELECTRIC GUITAR, JAZZ GUITAR, STEEL GUITAR, DISTORTION GUITAR, CLARINET, TIMPANI, WHISTLE	
	<b>VOICE MENU 3</b>	PAN FLUTE, CLARINET, FLÜGEL HORN, SOPRANO SAX, HARMONICA, COSMIC 1•2, CONTRA BASS	
	<b>PLAYER VIBRATO</b>	U.SOLO=DELAY•DEPTH, U.ORCHESTRAL DEPTH, 0•1•2•3•4	
	<b>SUSTAIN</b>	UPPER ORCHES., LOWER ORCHES., PEDALS, 0•1•2•3•4	
	<b>CASSETTE &amp; PACK</b>	CASSETTE=TO CASSETTE, FROM CASSETTE REGISTRATION PACK=TO PACK, FROM PACK, ERROR, CONFIRM	
	<b>MAIN CONTROL</b>		MASTER VOLUME, EXPRESSION PEDAL, FOOT SWITCH, POWER
<b>ACCESSORY JACKS</b>		HEADPHONES, AUX. OUT, EXP. IN, MIDI IN-OUT, TO CASSETTE, FROM CASSETTE	
<b>AMPLIFIER</b>		20 W	
<b>SPEAKERS</b>		10 cm (4")×2	
<b>DIMENSIONS</b>		106.2(W)×39.2(D)×84.6(H) cm (41 <sup>3</sup> / <sub>4</sub> "×15 <sup>1</sup> / <sub>2</sub> "×33 <sup>1</sup> / <sub>3</sub> "	
<b>WEIGHTS</b>		30.2 kg (66.5 lbs.)	29.5 kg (65 lbs.)

# MIDI Implementation Chart

Date: 11/15, 1985  
Version: 1.0

Function...		Transmitted	Recognized	Remarks
Basic Channel	Default	1 2 3	1 2 3 16	UK (PRESET) LK (PRESET) PK (PRESET) CONTROL (PRESET)
	Changes	×	×	
Mode	Default	Mode 3	Mode 3	
	Messages Altered	× *****	× ×	
Note Number		53-96 41-84 36-48	36-96 36-96 36-96	UK LK PK
	True Voice	*****	36-96	UK, LK, PK
Velocity	Note ON	× 9nH, v=64	× 9nH, v=1-127	
	Note OFF	× 9nH, v=0	× 9nH, v=0, 8nH	
After Touch	Key's	×	×	
	Ch's	×	×	
Pitch Bender		×	×	
Control Change		×	×	
Program Change		32-47	32-47	Regist. Menu
	True #	*****	32-47	
System Exclusive		○	○	FILL SW INTRO./ENDING SW
System Common	Song Pos	×	×	
	Song Sel	×	×	
	Tune	×	×	
System Real Time	Clock	○	○	*
	Commands	○	○	(FA, FC)
Aux Messages	Local ON/OFF	×	×	
	All Notes OFF	×	○	** (123)
	Active Sense	○	○	
	Reset	×	○	
Notes		* Recognize only when External Mode ** Recognize only channel 16		

Mode 1: OMNI ON, POLY  
Mode 3: OMNI OFF, POLY

Mode 2: OMNI ON, MONO  
Mode 4: OMNI OFF, MONO

○: Yes  
×: No



# MIDI Implementation Chart

Date: 11/15, 1985

Version: 1.0

Function...		Transmitted	Recognized	Remarks
Basic Channel	Default	1 2 3	1 2 3 16	UK (PRESET) LK (PRESET) PK (PRESET) CONTROL (PRESET)
	Changes	×	×	
Mode	Default	Mode 3	Mode 3	
	Messages	×	×	
	Altered	*****	×	
Note Number		53-96 41-84 36-48	36-96 36-96 36-96	UK LK PK
	True Voice	*****	36-96	UK, LK, PK
Velocity	Note ON	× 9nH, v=64	× 9nH, v=1-127	
	Note OFF	× 9nH, v=0	× 9nH, v=0, 8nH	
After Touch	Key's	×	×	
	Ch's	×	×	
Pitch Bender		×	×	
Control Change		×	×	
Program Change		0-4, 32-47	0-4, 32-47	Regist. Memory & Regist. Menu
	True #	*****	0-4, 32-47	
System Exclusive		○	○	FILL SW INTRO./ENDING SW FOOT SW
System Common	Song Pos	×	×	
	Song Sel	×	×	
	Tune	×	×	
System Real Time	Clock	○	○	* (FA, FC)
	Commands	○	○	
Aux Messages	Local ON/OFF	×	×	** (123)
	All Notes OFF	×	○	
	Active Sense	○	○	
	Reset	×	○	
Notes		* Recognize only when External Mode ** Recognize only channel 16		

Mode 1: OMNI ON, POLY  
Mode 3: OMNI OFF, POLY

Mode 2: OMNI ON, MONO  
Mode 4: OMNI OFF, MONO

○: Yes  
×: No

SINCE 1887



**YAMAHA**

NIPPON GAKKI CO., LTD. HAMAMATSU, JAPAN

*TELEPHONE is a registered trademark of Nippon Gakki Co., Ltd.*