


# RX-V2065 Zone 2 Hookup Example

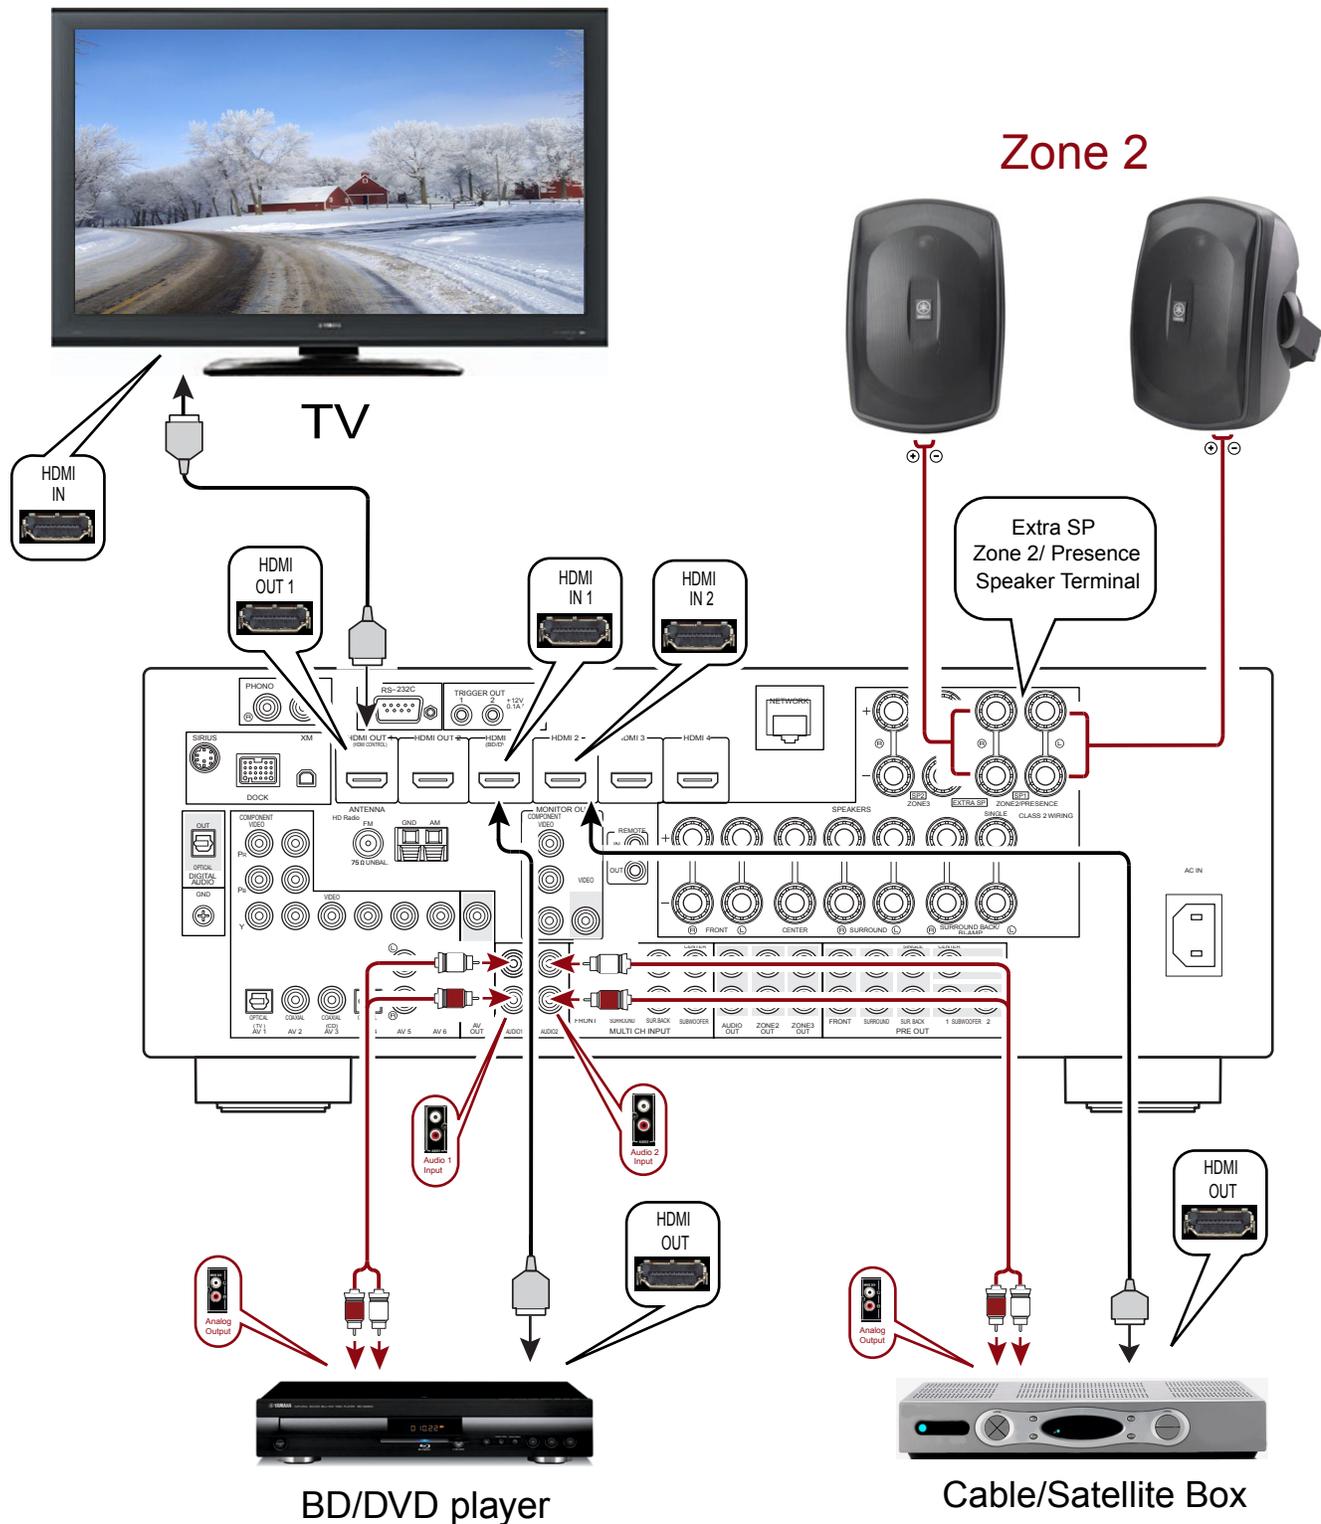

**NOTE:**  
To select the BD/DVD player as a source for Zone 2, the Audio 1 input on the receiver must be selected in Zone 2.

**NOTE:**  
To select the Cable/Satellite Box as a source for Zone 2, the Audio 2 input on the receiver must be selected in Zone 2.

## Zone 2 setup on the RX-V2065 using the Internal Power Amp

---

The **RX-V2065 Extra Speaker Terminals** can power one set of speakers for *Zone 2* or **Presence** speakers. If the **Extra Speaker Terminals** are utilized then the **RX-V2065** cannot be set for 7.1 (Surround Back terminals.) or Bi Amp (Surround Back terminals.)

### Setting the **Extra Speaker Terminals**

Note: The **RX-V2065** remote control will be used to access the **Setup Menu** of receiver.

1. Press the **On Screen** button on the remote control to enter the.
2. **Scene BD/DVD** will come up on the receiver **LED Screen**.
3. **Arrow** down to until **Setup** comes up in the receiver **LED Screen**.
4. Press the **Enter** Button on the remote control.
5. **Setup/Speaker Setup** will come up on the receiver **LED Screen**.
6. Press the **Enter** Button on the remote control.
7. **SP Set/1. Auto Setup** will come up on the receiver **LED Screen**.
8. **Arrow** down until **2 Manual Setup** comes up in the receiver **LED Screen**.
9. Press the **Enter** Button on the remote control.
10. **SP/Set, A) Config** will come up on the receiver **LED Screen**.
11. Press the **Enter** Button on the remote control.
12. **Config, Extra.....None** will come up on the receiver **LED Screen**.
13. Use the **Left/Right Arrow** buttons on the remote to change the **Extra** to: **Extra.....Zone2**.
14. Use the **Return** and **Setup** buttons on the remote to exit the **Setup Menu**.
15. **Extra Speaker** setup is complete.

To control **Zone 2** using the **RX-V2065** remote the switch at the upper most left hand corner of the remote must be set to **Zone 2**. Once the remote has been set to **Zone 2** the following commands will be available:

1. Selecting the input source (**AV5-6, AUDIO1-2, and V-AUX**) of **Zone 2**.
2. Adjusting the volume of **Zone 2** (when a **Zone 2** speaker is connected to the **EXTRA SP** jack).
3. Tuning into **FM** or **AM** when "TUNER" is selected as the input source of **Zone 2** (see page 29 of the owner's manual).
4. Tuning into **XM Satellite Radio** when "XM" is selected as the input source of **Zone 2** (see page 33) (U.S.A. model only).
5. Tuning into **SIRIUS Satellite Radio** when "SIRIUS" is selected as the input source of **Zone 2** (see page 37) (U.S.A. model only).
6. Playing back music stored on your iPod stationed in a **Yamaha iPod** universal dock (such as **YDS-10, YDS-11 and YDS-12** sold separately) connected to the **DOCK** terminal.

Note: Only **Analog** signals can be sent to **Zone 2**. If you want to output the sound from **Zone 2**, connect an external component to **AV 5-6** or **Audio 1-2** by analog connection.

### Important Safety Notice:

The **EXTRA SP Speaker Terminals** of this unit should not be connected to a **Passive Loudspeaker Selector Box** or more than one **Loudspeaker per Channel**. Connection to a **Passive Loudspeaker Selector Box** or **Multiple Speakers per channel** could create an abnormally low impedance load resulting in amplifier damage.