

# RX-V567/HTR-5063 How to program remote control codes For TV Control Key Operations



NOTE: The following steps must be completed within 1 minute. Settings will be automatically stopped after 1 minute passes since the last operation and steps 2 through 4 will have to be repeated.

- 1 Use the remote codes listed in this document to find your TV manufacturer code.
- 2 Press the Code Set button on the remote using a small pointed object such as a ball point pen or small paper clip.



- 3 Press the TV Power button on the bottom of the remote.



- 4 Enter in your TV remote control code using the Numeric Keys on the remote control.



Once the remote control code is registered successfully the Transmit light will blink twice. If the Transmit light blinks more than twice the code registration has failed. Steps 2 through 4 will need to be repeated.



If multiple control codes exist, start with the first one on the list. If it does not work, cross it off and try the next code until one works.

# List of remote control codes

<b>TV</b>			Axion	0156	Condor	0161, 0277, 0320, 0323, 0342, 0350, 0351	Elin	0277, 0320, 0323, 0342, 0349, 0350
A.R. Systems	0320		Baird	0282			Elite	0320, 0340, 0350
Acme	0342		Bang & Olufsen	0180, 0339	Contec	0179, 0277, 0323, 0342, 0343, 0344	Elman	0341
Acura	0323, 0343		Basic Line	0282, 0320, 0323, 0340, 0343, 0350			Elta	0277, 0323, 0343
ADC	0337		Bastide	0282, 0342	Contec/Cony	0012, 0058	Emerson	0000, 0007, 0008, 0012, 0013, 0019, 0026, 0031, 0037, 0051, 0058, 0059, 0161, 0179, 0320, 0339
Admiral	0054, 0178, 0336, 0337, 0339, 0346, 0347		Baur	0320, 0349	Continental Edison	0345		
			Bazin	0282				
Advent	0158		Beko	0161, 0269, 0294, 0302, 0311, 0320, 0328, 0351	Cosmel	0323, 0343		
Adventura	0057				Craig	0058, 0179		
Adyson	0277, 0282, 0342		Belcor	0008	Crosley	0010, 0037, 0171, 0339	Emprex	0154
Agashi	0277, 0282		Bell & Howell	0019, 0054	Crown	0058, 0161, 0171, 0179, 0320, 0323, 0343, 0349, 0350, 0351	Envision	0008, 0026, 0050
Agazi	0337		Benq	0097, 0242, 0361			Epson	0155, 0206, 0359
Aiko	0277, 0282, 0320, 0323, 0342, 0343		Beon	0320, 0349, 0350			Erres	0320, 0349, 0350
			Best	0161			ESA	0051
Aim	0320		Bestar	0161, 0320, 0350	CS Electronics	0277, 0340, 0342	ESC	0282
Aiwa	0078, 0379		Binatone	0282, 0342	CTC Clatronic	0341	Etron	0343
Akai	0050, 0055, 0109, 0159, 0181, 0277, 0282, 0320, 0323, 0340, 0343, 0349, 0350		Blue Sky	0320, 0340	CTX	0205	Eurofeel	0282
			Blue Star	0348	Curtis Mathes	0007, 0008, 0010, 0019, 0021, 0026, 0049, 0050, 0178	Euro-Feel	0337
Akiba	0320, 0340		Boots	0282, 0342			Euroline	0349
Akura	0320, 0323, 0337, 0340		BPL	0320, 0348	CXC	0058, 0179	Euroman	0161, 0277, 0282, 0320, 0337, 0342, 0350
			Bradford	0058, 0179	Cybertron	0340	Europhonic	0277, 0282, 0320, 0341, 0342, 0350
Alaron	0277		Brandt	0322, 0345	Daewoo	0007, 0008, 0026, 0037, 0053, 0167, 0266, 0275, 0277, 0282, 0315, 0320, 0323, 0331, 0335, 0342, 0343, 0350, 0381, 0465	Expert	0321
Alba	0161, 0277, 0320, 0323, 0340, 0342, 0343, 0344, 0349, 0351, 0372, 0382		Brilliant	0182			Exquisit	0320
			Brinkmann	0320	Dainichi	0277, 0340	Fenner	0323, 0343
Albatron	0140		Brionvega	0320, 0339, 0349, 0350	Dansai	0277, 0282, 0320, 0337, 0349, 0350	Ferguson	0322, 0345, 0349
Alcyon	0171		Britannia	0277, 0282, 0342			Fidelity	0277, 0320, 0342, 0346
Alleron	0059		Brockwood	0008	Dayton	0007, 0008, 0026, 0323, 0343	Filex	0282
Allorgan	0282		Broksonic	0109, 0179	Dawa	0161, 0349	Finlandia	0346
Allstar	0320, 0350		Bruns	0339	Daytron	0007, 0008, 0026, 0323, 0343	Finlux	0171, 0282, 0320, 0339, 0341, 0342, 0349, 0350
America Action	0179		BTC	0340	De Graaf	0346	FIRST LINE	0342, 0343, 0350
AMOi	0276		Bush	0269, 0282, 0283, 0304, 0320, 0323, 0328, 0332, 0340, 0343, 0344, 0346, 0348, 0349, 0350, 0372, 0382, 0463, 0470, 0472	Decca	0282, 0320, 0342, 0349, 0350	Firstline	0277, 0282, 0320, 0323
Amplivision	0161, 0282, 0321, 0342		Candle	0008, 0026, 0050, 0057	Dell	0145, 0245	Fisher	0019, 0161, 0282, 0339, 0342, 0344, 0351
Amstrad	0320, 0323, 0337, 0340, 0343		Capsonic	0337	Denver	0358, 0362	Flint	0320, 0350
Amtron	0058		Carena	0320	Desmet	0320, 0349, 0350	Formenti	0171, 0277, 0336, 0339, 0342, 0349
Anam	0179, 0343		Carnivale	0050	Diamant	0320	Formenti/Phoenix	0277
Anam National	0052, 0058		Carrefour	0344	Diamond	0277	Fortress	0336, 0339
Anglo	0323, 0343		Carver	0010	DiamondVision	0135, 0143	Fraba	0161, 0320
Anitech	0171, 0320, 0323, 0337, 0343		Cascade	0320, 0323, 0343	Dimensia	0049	Friac	0161
Ansonic	0161, 0168, 0320, 0323, 0341, 0343		Casio	0367	Disney	0219	Frontech	0282, 0323, 0337, 0343, 0346, 0347
AOC	0008, 0026, 0050, 0053		Cathay	0320, 0349, 0350	Dixi	0282, 0320, 0323, 0343, 0349, 0350	Fujitsu	0059, 0069, 0074, 0075, 0282
Apex	0039, 0111, 0217		CCE	0183, 0282	Dream Vision	0461, 0498	Fujitsu General	0282
Arcam	0277, 0282		Celebrity	0055, 0107	DTS	0323, 0343	Fujitsu Siemens	0504, 0505, 0507, 0510, 0511
Arcam Delta	0342		Celera	0039	Dual	0282, 0320, 0342		
Aristona	0320, 0349, 0350		Centurion	0320, 0349, 0350	Dual-Tec	0342, 0343		
Arthur Martin	0321		Century	0339	Dumont	0008, 0030, 0062, 0282, 0339, 0341, 0342		
ASA	0339, 0347		CGE	0161, 0171	Durabrand	0031, 0051, 0179, 0215		
Asberg	0171, 0320, 0350		Changhong	0039	Dux	0349		
Astra	0343		Chimei	0273	Dwin	0178		
Asuka	0277, 0282, 0337, 0340, 0342		Cimline	0323, 0343	Dynatron	0320, 0349, 0350		
Atlantic	0277, 0320, 0342, 0349, 0350		Citizen	0007, 0008, 0026, 0050, 0058	Dynex	0228, 0231		
			City	0323, 0343	Elbe	0161, 0168, 0282, 0320		
Atori	0323, 0343		Clarion	0179	Elcit	0339		
Auchan	0321		Clarivox	0349	Electa	0348		
Audiosonic	0161, 0282, 0320, 0340, 0342, 0343, 0349, 0350		Clatronic	0161, 0171, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0350, 0351	ELECTRO TECH	0343		
					Electroband	0055, 0107		
AudioTon	0161, 0282, 0342		CMS	0277	Electrograph	0176		
Audiovox	0058, 0179, 0194		CMS Hightec	0282	Electrohome	0008, 0026, 0052, 0055		
Ausind	0171		Coby	0197	Element	0230		
Autovox	0171, 0282, 0337, 0339, 0342		Colortyme	0008, 0026				
Aventura	0051		Commercial Solutions	0021				
Awa	0277, 0282		Concerto	0008, 0026				
			Concorde	0323, 0343				

Genexxa	0320, 0340, 0347, 0350	Infinity	0010	Lifetec	0320, 0323, 0337, 0343	Multitech	0058, 0161, 0179, 0183, 0277, 0282, 0320, 0323, 0341, 0342, 0343, 0344, 0346, 0349
GFM	0128, 0227	InFocus	0250, 0327, 0363, 0479, 0508	Lloyds	0323		
Giant	0282	Ingelen	0347	Loewe	0161, 0168, 0265, 0320, 0330, 0352		
Gibraltar	0008, 0030, 0050, 0062	Ingersol	0323, 0343	Loewe Opta	0339, 0349, 0350	Murphy	0277, 0342
GoldHand	0277	Initial	0153	Logik	0054	NAD	0026, 0031, 0111
Goldline	0320	Inno Hit	0171, 0282, 0320, 0323, 0340, 0342, 0343, 0349, 0350	Luma	0320, 0323, 0346, 0349	Naonis	0346
GoldStar	0007, 0008, 0012, 0026, 0031, 0050, 0053, 0161, 0277, 0282, 0320, 0323, 0342, 0343, 0346, 0349, 0350	Innovation	0337, 0343	Lumatron	0282, 0320, 0346, 0349, 0350	NEC	0008, 0026, 0050, 0052, 0053, 0072, 0103, 0282, 0344
Goodmans	0246, 0272, 0282, 0320, 0323, 0337, 0343, 0344, 0349, 0350, 0462, 0473, 0477	Insignia	0131, 0228, 0236, 0238	Lux May	0350	Neckermann	0161, 0282, 0320, 0339, 0342, 0346, 0349, 0350, 0351
		Inteq	0030	Luxor	0008, 0026		
		Interactive	0161	LXI	0282, 0342, 0346	NEI	0320, 0349, 0350
		Interbuy	0323, 0343		0010, 0019, 0021, 0026, 0027, 0031, 0049, 0111	Net-TV	0176
		Interfunk	0161, 0320, 0339, 0347, 0349, 0350	M Electronic	0342, 0343, 0345, 0347, 0349, 0350	Neufunk	0320, 0323
		International	0277			New Tech	0343, 0350
		Intervision	0161, 0282, 0320, 0337, 0341, 0342	MAG	0096	New World	0340
Gorenje	0161, 0351			MAG	0096	NewTech	0282, 0320, 0323
GPM	0340	Irradio	0171, 0320, 0323, 0340, 0343, 0349, 0350	Magnadyne	0339, 0341, 0349	Nicamagic	0277, 0342
GPX	0129			Magnafon	0171, 0277, 0341, 0342	Nikkai	0277, 0282, 0320, 0323, 0337, 0340, 0342, 0349, 0350
Gradiente	0240	Isukai	0320, 0340	Magnavox	0008, 0009, 0010, 0013, 0026, 0032, 0033, 0048, 0050, 0128, 0211, 0212, 0224, 0226, 0239	Nikko	0026, 0031, 0050
Graetz	0347	ITC	0282, 0342			Nobliko	0171, 0277, 0341, 0342
Granada	0171, 0282, 0320, 0321, 0342, 0344, 0346, 0349, 0350	ITS	0277, 0320, 0340, 0348, 0350				
Grandin	0340, 0343, 0348, 0349	ITT	0343, 0347			Nokia	0347
		ITV	0320, 0343, 0349	Magnum	0337, 0343	Norcent	0201
Gronic	0282	Janeil	0057	Majestic	0054	Nordic	0282
Grundig	0160, 0161, 0171, 0310, 0320	JBL	0010	Mandor	0337	Nordmende	0339, 0345, 0347, 0350
		JC Penney	0007, 0008, 0026, 0027, 0049, 0053, 0056	Manesth	0282, 0320, 0337, 0342, 0349, 0350	Nordvision	0349
Grunpy	0058, 0059, 0179					Novatronic	0320
Haier	0157, 0233	JCB	0055, 0107	Marantz	0008, 0010, 0026, 0050, 0204, 0320, 0349, 0350	Oceanic	0321, 0347
Halifax	0277, 0282, 0337, 0342	Jensen	0008, 0026	Marelli	0339	Okano	0161, 0320, 0351
		JVC	0012, 0014, 0015, 0056, 0064, 0065, 0067, 0169, 0174, 0297, 0314, 0344, 0350, 0375	Mark	0277, 0282, 0320, 0323, 0349, 0350	Olevia	0102, 0199, 0200, 0207, 0222
Hallmark	0008, 0026, 0031			Masuda	0282	ONCEAS	0342
Hampton	0277, 0282, 0342	Kaisui	0277, 0282, 0320, 0323, 0340, 0342, 0343, 0348	Matsui	0282, 0320, 0323, 0342, 0343, 0344, 0346, 0349, 0350, 0455	Onwa	0058, 0179
Hanseatic	0161, 0168, 0282, 0320, 0323, 0342, 0343, 0344, 0349, 0350					Opera	0320
						Oppo	0130
Hantarex	0320, 0323, 0343					Optimus	0017, 0019
Hantor	0320	Kamosonic	0342	Matsushita	0017	Optoma	0144
Harman/Kardon	0010	Kamp	0277, 0342	Maxent	0147, 0176	Optonica	0178
Harvard	0058, 0179	Kapsch	0347	Mediator	0320, 0349, 0350	Orbit	0320, 0350
Harwood	0320, 0323	Karcher	0161, 0320, 0342, 0343, 0349	Medion	0320, 0337, 0343	Orion	0043, 0146, 0283, 0320, 0323, 0328, 0343, 0349, 0350
Havermy	0178			Megapower	0140		
HCM	0282, 0320, 0323, 0337, 0342, 0343, 0348	Kawasho	0008, 0026, 0055, 0277	Megatron	0026, 0031	Orline	0320
				MElectronic	0277, 0282, 0320, 0323	Osaki	0282, 0320, 0337, 0340, 0342
Hema	0282, 0323	KEC	0179			Oso	0340
Hewlett Packard	0192	Kendo	0161, 0320, 0341, 0346	Melvox	0321	Otto Versand	0282, 0320, 0336, 0342, 0344, 0348, 0349, 0350
Higashi	0277			Memorex	0019, 0026, 0031, 0053, 0054, 0137, 0215, 0323, 0343		
HiLine	0320	Kenwood	0008, 0026, 0050			Pael	0277, 0342
Hinari	0320, 0323, 0340, 0343, 0344, 0349, 0350	KIC	0282	Memphis	0323, 0343	Palladium	0161, 0282, 0320, 0342, 0351
		Kingsley	0277, 0342	Mercury	0320, 0323		
		KLH	0039	Metz	0339	Palsonic	0282
Hisawa	0321, 0340, 0348	Kloss Novabeam	0057, 0058	MGA	0008, 0026, 0031, 0050, 0053	Panama	0277, 0282, 0320, 0323, 0337, 0342, 0343
Hisense	0247	Kneissel	0161, 0168, 0320				
Hitachi	0008, 0012, 0026, 0066, 0084, 0092, 0093, 0120, 0172, 0173, 0255, 0270, 0271, 0282, 0320, 0335, 0338, 0342, 0344, 0346, 0347, 0365, 0382, 0448, 0456, 0467	Kolster	0320, 0350	Micromaxx	0337, 0343	Panasonic	0016, 0017, 0020, 0022, 0023, 0035, 0052, 0056, 0084, 0085, 0133, 0163, 0193, 0284, 0286, 0290, 0292, 0320, 0325, 0347, 0356
		Konka	0340	Microrstar	0337, 0343		
		Korpel	0320, 0349, 0350	Midland	0007, 0021, 0023, 0027, 0030, 0056, 0062		
		Korting	0161, 0339				
		Kosmos	0320	Minerva	0171		
		Koyoda	0343	Minoka	0320, 0350		
		KTV	0007, 0050, 0058, 0179, 0183, 0282, 0342	Mintek	0153		
				Mitsubishi	0008, 0026, 0031, 0053, 0066, 0084, 0093, 0098, 0150, 0178, 0289, 0320, 0339, 0344, 0350, 0376		
Hornlyphon	0320, 0350	Kyoto	0277, 0282				
Hoshai	0340	Lasat	0161	Mivar	0161, 0168, 0171, 0277, 0282, 0342		
Huanyu	0277, 0342	Lenco	0323, 0343	Monivision	0140		
Hygashi	0277, 0282, 0342	Lenoir	0323, 0342, 0343	Montgomery Ward	0054	Panavision	0320
Hyper	0277, 0282, 0323, 0342, 0343	Leyco	0320, 0337, 0349, 0350			Pathe Cinema	0161, 0168, 0277, 0321, 0342
Hypson	0282, 0320, 0321, 0337, 0342, 0348, 0349, 0350	LG	0031, 0053, 0066, 0116, 0117, 0140, 0161, 0164, 0175, 0195, 0269, 0277, 0282, 0300, 0309, 0317, 0320, 0323, 0328, 0342, 0343, 0346, 0349, 0350, 0366, 0368, 0377, 0466, 0471, 0478			Pausa	0323, 0343
						Penney	0021, 0023, 0031, 0050, 0111
						Perdio	0277, 0320
Hyundai	0141					Perfekt	0320
Iberia	0320	LG/GoldStar	0164			Philco	0008, 0009, 0010, 0012, 0026, 0050, 0052, 0053, 0161, 0171, 0320, 0339
ICE	0277, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0350	Liesenk	0349	Motion	0171		
		Liesenkotter	0320	Motorola	0052, 0178	Philharmonic	0282, 0342
ICeS	0277	Life	0337, 0343	MTC	0008, 0026, 0050, 0053, 0161, 0277	Philips	0008, 0009, 0010, 0011, 0012, 0032, 0048, 0049, 0052, 0122, 0128, 0134, 0186, 0187, 0213, 0221, 0224, 0226,
Ilo	0148, 0153			Multi System	0349		
IMA	0058						
Imperial	0161, 0171, 0320, 0347, 0350, 0351						
Indiana	0320, 0349, 0350						

	0239, 0256, 0257, 0259, 0261, 0263, 0267, 0280, 0281, 0287, 0296, 0299, 0301, 0303, 0305, 0313, 0319, 0320, 0324, 0333, 0339, 0342, 0349, 0350, 0353, 0357, 0360, 0380, 0383, 0452, 0459, 0460		0339	Sonoko	0282, 0320, 0323, 0337, 0342, 0343, 0349, 0350	Tesmet	0350
		Robotron	0339	Sonolor	0321, 0347	Tevion	0337, 0343
		Rowa	0277, 0282	Sontec	0161, 0320, 0349, 0350	Textet	0277, 0282, 0323, 0342
		Royal Lux	0161	Sony	0038, 0044, 0045, 0047, 0055, 0104, 0105, 0107, 0110, 0123, 0184, 0220, 0248, 0249, 0251, 0252, 0254, 0326, 0343, 0344, 0371, 0374, 0457, 0475	Thomson	0162, 0188, 0189, 0285, 0320, 0322, 0342, 0345, 0350
		RTF	0339	Sound & Vision	0340, 0341	Thorn	0320, 0349
		Runco	0030, 0050, 0062	Soundesign	0008, 0026, 0031, 0058, 0059, 0179	TMK	0008, 0026, 0031
		Saba	0298, 0322, 0339, 0345, 0347	Soundwave	0320, 0349, 0350	TNCi	0030
		Saisho	0282, 0323, 0337, 0342, 0343	Squareview	0051	Tokai	0282, 0320, 0350
		Salora	0346, 0347	SSS	0008, 0058, 0179	Tokyo	0277, 0342
		Sambers	0171, 0341	Standard	0282, 0320, 0323, 0340, 0342, 0343, 0350	Tomashi	0348
Philips Magnavox	0011, 0032, 0033	Sampo	0007, 0008, 0026, 0050, 0176	Starlite	0058, 0179, 0320, 0323, 0349	Toshiba	0018, 0019, 0040, 0041, 0046, 0073, 0100, 0103, 0108, 0109, 0111, 0121, 0132, 0166, 0208, 0210, 0214, 0217, 0260, 0268, 0282, 0283, 0293, 0304, 0306, 0307, 0329, 0344, 0355, 0454
Phoenix	0161, 0277, 0320, 0339, 0349, 0350	Samsung	0004, 0005, 0006, 0007, 0008, 0012, 0026, 0031, 0036, 0050, 0053, 0076, 0077, 0079, 0114, 0124, 0125, 0126, 0127, 0139, 0161, 0183, 0185, 0190, 0191, 0258, 0264, 0277, 0282, 0320, 0323, 0334, 0337, 0342, 0343, 0349, 0350, 0351, 0373, 0453, 0468	Stern	0348	Totevision	0007
Phonola	0277, 0320, 0339, 0349, 0350	Sandra	0277, 0282, 0342	Strato	0320, 0323	Towada	0282, 0347
Pilot	0007, 0008, 0050	Sansui	0043, 0109, 0320, 0350	Stylandia	0282	Trakton	0282
Pioneer	0008, 0026, 0094, 0095, 0161, 0320, 0345, 0347, 0349, 0350, 0458	Sanyo	0008, 0019, 0068, 0070, 0071, 0099, 0161, 0168, 0223, 0237, 0277, 0282, 0288, 0295, 0323, 0342, 0344, 0369, 0469	SuperTech	0277, 0320, 0323	Trans Continens	0282, 0320
Plantron	0320, 0323, 0337, 0350	SBR	0320, 0349	Supra	0323, 0343	Transtec	0277
Playsonic	0282	Sceptre	0235, 0244	Supre-Macy	0057	Trident	0282
Polaroid	0039, 0142, 0202, 0234	Schaub Lorenz	0347	Supreme	0055, 0107	Triumph	0320
Poppy	0323, 0343	Schneider	0282, 0316, 0318, 0320, 0333, 0340, 0342, 0349, 0350, 0382	Susumu	0340	Uher	0161, 0171, 0320, 0347, 0350
Portland	0007, 0008, 0026, 0053	Scotch	0026, 0031	Sutron	0323, 0343	Ultravox	0277, 0320, 0339, 0341, 0342
Prandoni-Prince	0171, 0346	Scott	0008, 0012, 0026, 0031, 0058, 0059, 0149, 0179	SVA	0151	Unic Line	0320
Precision	0282, 0342	Sears	0008, 0010, 0019, 0021, 0026, 0027, 0031, 0049, 0051, 0059, 0111	Sydney	0277, 0282, 0342	United	0349
Prima	0157, 0243, 0323, 0343, 0347	SEI	0277, 0282, 0320, 0323, 0337, 0341, 0342, 0344, 0349, 0382	Sylvania	0008, 0009, 0010, 0011, 0013, 0026, 0048, 0050, 0051, 0128, 0227, 0253	Universum	0161, 0171, 0282, 0320, 0337, 0349, 0350, 0351
Princeton	0140	SEI-Sinudyne	0339, 0341, 0347	Symphonic	0051, 0058, 0062, 0128, 0179, 0215	Univox	0320
Prism	0023, 0056	Seleco	0344, 0346, 0347	Syntax	0199	Vector Research	0050
Profex	0323, 0343	Sencora	0323, 0343	Syntax-Brilliant	0199	Vestel	0282, 0320, 0346, 0347, 0349, 0350, 0351
Profi-Tronic	0320, 0350	Sentra	0323	Sysline	0349	Vexa	0320, 0323, 0343, 0349
Proline	0320, 0350	Serino	0277	Sytong	0277	Victor	0015, 0344, 0350
Proscan	0021, 0027, 0049	Sharp	0000, 0001, 0002, 0003, 0007, 0008, 0012, 0026, 0060, 0088, 0089, 0091, 0138, 0165, 0170, 0178, 0198, 0229, 0262, 0278, 0279, 0291, 0308, 0312, 0336, 0344, 0354, 0370, 0449, 0450, 0451, 0464, 0474, 0476	Symphonix	0051, 0058, 0062, 0128, 0179, 0215	VIDEOLOGIC	0277
Prosonic	0161, 0277, 0282, 0320, 0342, 0349	SEI	0339, 0341, 0347	Tandyl	0178, 0282, 0336, 0340, 0342, 0347	Videologique	0277, 0282, 0340, 0342
Protech	0282, 0337, 0341, 0342, 0343, 0349, 0350	SEI-Sinudyne	0339, 0341, 0347	Tashiko	0277, 0282, 0342, 0344, 0346	VideoSystem	0320, 0350
Proton	0008, 0012, 0026, 0031	Selec	0344, 0346, 0347	Tatung	0052, 0177, 0282, 0320, 0342, 0349, 0350	Videotechnic	0277, 0282
Protron	0196	Sencora	0323, 0343	Teac	0282, 0320	Vidikron	0010
PROVIEW	0096, 0246	Sentra	0323	Tec	0282, 0323, 0342, 0343	Vidtech	0008, 0026, 0031, 0053
Provision	0320, 0349	Serino	0277	Technics	0017, 0023, 0056	Viewsonic	0176, 0203, 0232, 0364
Pulsar	0008, 0030, 0062	Sheng Chia	0178	TechniSat	0274, 0496, 0497, 0499	Viking	0057
Pye	0256, 0320, 0349, 0350, 0378	Shogun	0008	Techwood	0008, 0023, 0026, 0056	Viore	0148
Pymi	0323, 0343	Siarem	0320, 0339, 0341	TEDELEX	0282	Visiola	0277, 0342
Quandra Vision	0321	Sierra	0320, 0350	Teknika	0007, 0008, 0010, 0012, 0026, 0053, 0054, 0058, 0059, 0179	Vision	0282, 0320, 0350
Quasar	0017, 0023, 0052, 0056	Siesta	0161	Teleavia	0345	Vizio	0008, 0177, 0218, 0242, 0500, 0501, 0502, 0503, 0506
Quelle	0282, 0320, 0337, 0342, 0349, 0350	Signature	0054	Telecor	0282, 0320	Vortec	0320, 0349, 0350
Questa	0344	Silva	0277	Telefunken	0320, 0322, 0345, 0350	Voxson	0171, 0320, 0339, 0346, 0347, 0350
Radialva	0320	Silver	0344	Telegazi	0320	Waltham	0282, 0320, 0342
RadioShack	0019, 0021, 0031, 0050, 0179, 0320	Singer	0321, 0339, 0341	Telemeister	0320	Wards	0008, 0009, 0010, 0026, 0031, 0048, 0049, 0050, 0053, 0054, 0059
RadioShack/Realistic	0007, 0008, 0012, 0026, 0049, 0058	Sinudyne	0320, 0339, 0341, 0349	Telestar	0320	Watson	0320, 0349, 0350
Radiola	0282, 0320, 0349, 0350	Skantik	0347	Teletech	0320, 0323, 0343, 0349	Watt Radio	0277, 0341, 0342
Radiomarelli	0320, 0339	Solavox	0347	Teleton	0282, 0342	Waycon	0111
Radiotone	0161, 0320, 0323, 0350	Sonitron	0161, 0282	Televideon	0277	Wega	0320, 0339, 0344
Rank	0344			Televisto	0321	Wegavox	0323
RCA	0008, 0021, 0024, 0025, 0026, 0027, 0042, 0049, 0052, 0053, 0063, 0136, 0225			Tensai	0282, 0320, 0323, 0340, 0343, 0350	Weltblick	0282, 0320, 0349, 0350
Realistic	0019, 0031, 0050, 0179					White Westinghouse	0107, 0216, 0220
Recor	0320						0037, 0090, 0277, 0320, 0341, 0342, 0349
Redstar	0320						0101, 0106
Reflex	0320						0320
Revox	0161, 0320, 0349, 0350						
Rex	0337, 0346, 0347						
RFT	0161, 0168, 0339						
Rhapsody	0277						
R-Line	0320, 0349, 0350						
Roadstar	0323, 0337, 0340, 0343						

Yamaha	0008, 0026, 0050, 0053, 0080, 0081, 0082, 0083, 0086, 0087
Yamishi	0282, 0320
Yokan	0320
Yoko	0161, 0277, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0349, 0350
Yorx	0340
Zanussi	0282, 0346
Zenith	0008, 0028, 0029, 0030, 0031, 0054, 0061, 0062

---

## **Note:**

If the codes are not available in this code list for your product then the receiver remote will not be able to control it. If it is a CD player you may be able to get it to work by trying the same manufacture DVD player codes. All the IR information on third party products is integrated at the time of manufacture and the Yamaha universal remotes are not re-programmable, meaning that their internal code libraries cannot be updated.