
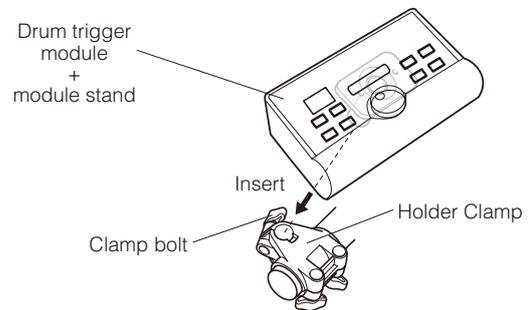


The DTX560K and DTX530K feature the same Drum units as those of the DTX700K, with the following exceptions:
 - Unlike the DTX700K, both the DTX560K and DTX530K have the Drum Trigger Module DTX500.
 - Unlike the DTX700K, the DTX530K has the TP65, instead of the XP70.

Accordingly, you should refer to the DTX700K Assembly Manual for details on how to assemble the pads to the rack. The following description covers assembly of the DTX500 Drum Trigger Module only.

Mounting the drum trigger module

1. Attach the module stand (provided) to the underside of the drum trigger module using the module stand fastening screws.
2. Place the module stand inside the holder clamp and tighten the clamp bolt to secure in position.

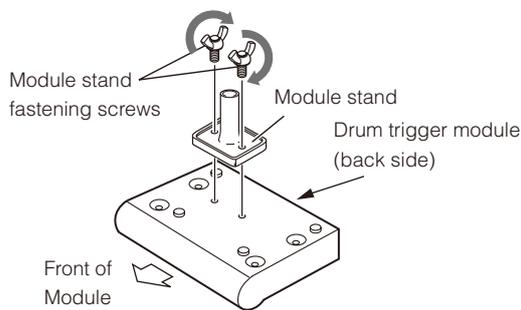


Connect the pads to the drum trigger module

Insert the 9-channel snake cable's straight plugs into the drum trigger module's trigger input jacks ([1 SNARE] to [9 KICK/10]) and [HI-HAT CONTROL]).

NOTE If you are using the standard setup, the stickers on each of the snake cable's plugs will indicate the name of the corresponding pad.

Drum trigger module's rear panel

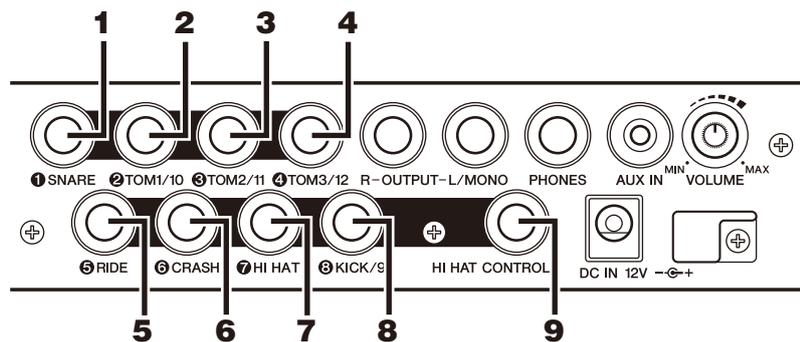

9-channel snake cable

