

5

Deleting the upgrade data

Press the [PLAY/PAUSE] button to call up the following display to start deleting the upgraded data.



When the deletion of the upgrade data is completed, the following display appears.

Completed.

Confirming the version number

- 1) Turn on the power of the instrument.
- 2) Press [FUNCTION] button.
- 3) Use A [-] button to show 'Version Program'.

Troubleshooting

- ☆ The power supply was cut off or the USB flash memory was removed during operation.
 - A complete reinstall is necessary. Perform the operation again from the beginning.
- ☆ "InS" is blinking when the power is turn on.
 - The USB flash memory is not inserted.
- ☆ Error number (E.xx) appears and the installation cannot be executed.

Check the following:

 - ✓ Is the USB flash memory inserted correctly?
 - ✓ Is the USB connector free from dust or dirt?
 - ✓ Is the USB flash memory or the upgrade data itself damaged in some way?

Try installing it again by using another USB flash memory.