


New firmware that provides additional features or product improvements will be released as needed. If the unit is connected to the Internet, you can download the firmware via the network and update it.

**Notes:**

\*Do not operate the unit or disconnect the power cable or network cable during firmware update. Firmware update takes about 20 minutes or more (depending on your Internet connection speed).

\*If the unit is connected the wireless network via a wireless adapter, network may not be possible depending on the condition of the wireless connection. In this case, update the firmware using the USB memory device.

You can also update the firmware using the USB memory device from the “ADVANCED SETUP” menu.

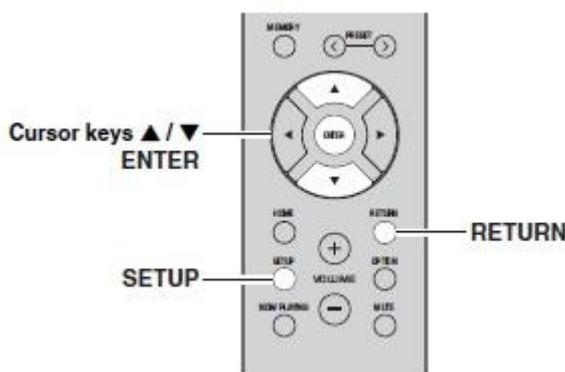

1. Press **SETUP**.
2. Use the cursor keys (▲/▼) to select “Network” and press **ENTER**.
3. Use the cursor (▲/▼) to select “Information” and press **ENTER**.

If new firmware is available, “NEW FW Available” appears on the front display.



NEW FW  
▲ Available

4. Press **RETURN** to return the previous state.
5. Use the cursor key (▲/▼) to select “Update” and press **ENTER**.



UPDATE  
▲ PerformUpdate

6. To start the firmware update, press **ENTER**.

The unit restarts and the firmware update starts.

To cancel the operation without updating the firmware, press **SETUP**.

7. If “**UPDATE SUCESS**” appears on the front display, press **POWER (⏻)** on the front panel.

The firmware update is complete.

**Notification of new firmware update**

When new firmware is available, “NEW FW Update” will be displayed for a short period of time when the unit is turned on.



## Firmware Update for R-N402

---

A close-up photograph of a black LCD screen with white pixelated text. The text is arranged in two lines: "NEW FW" on the top line and "Update [ENTER]" on the bottom line. The screen is set against a dark background.

To update the unit's firmware, press ENTER (as described in Step 6 above) while this notification is displayed, and then proceed to Step 7.